

ASSEMBLY PROCEDURE


IN9301

BNC Male Connectors for IN7000 / IN7000P / IN7200 Sync Wires.

Use IN9320 Crimp Tool, IN9321 Crimp Die, IN9330 Deluxe Cable Stripper, IN9331 Heavy Duty Cable Cutter, & IN9332 Precision Diagonal Cutter.


STEP #1

Slide the step-down ferrule as shown over the cable end. Strip the cable according to these dimensions:

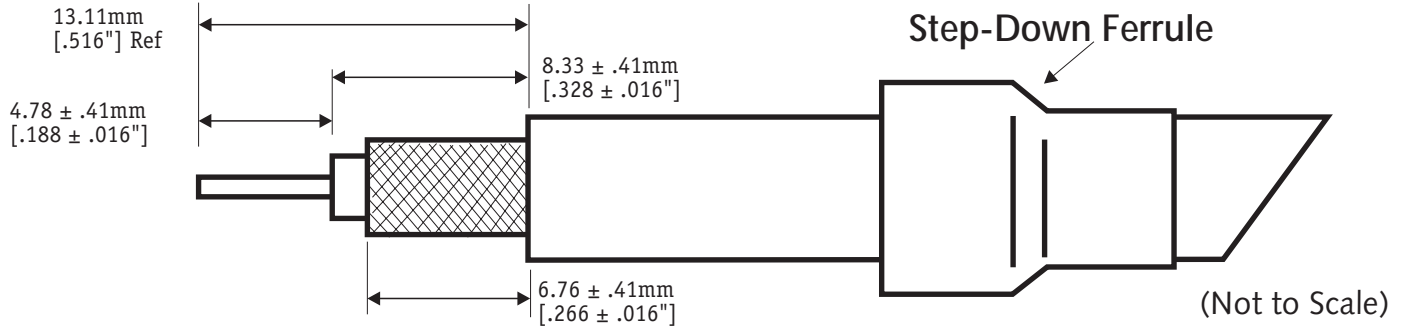


STEP #2

Flair cable braid and slide tubing over cable dielectric. Insert cable conductor into center contact sliding up against the tubing. Crimp center contact at crimp area using crimp die IN9321.

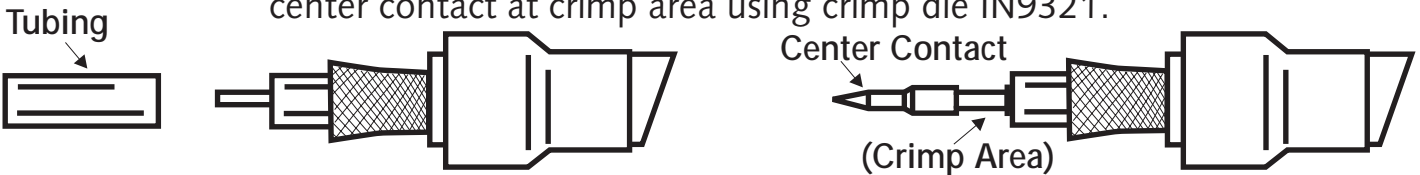


STEP #3

Insert the center contact into the plug body with the braid over the support sleeve of the plug body.

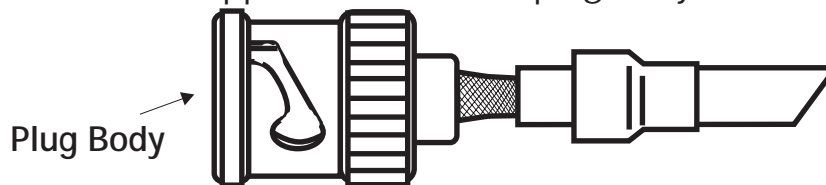

STEP #4

Slide the step-down ferrule over the braid and support sleeve.

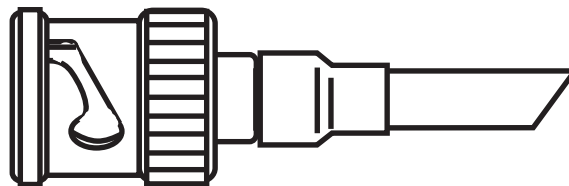

STEP #5

Crimp the step-down ferrule using crimp die IN9321.

