



SB A 33 Series


Adjustable Width Sound Bar




User Guide
Audio Products

Safety Instructions


Safety Instructions • English


WARNING: This symbol, , when used on the product, is intended to alert the user of the presence of uninsulated dangerous voltage within the product's enclosure that may present a risk of electric shock.

ATTENTION: This symbol, , when used on the product, is intended to alert the user of important operating and maintenance (servicing) instructions in the literature provided with the equipment.

For information on safety guidelines, regulatory compliances, EMI/EMF compatibility, accessibility, and related topics, see the Extron Safety and Regulatory Compliance Guide, part number 68-290-01, on the Extron website, www.extron.com.


تعليمات السلامة • العربية


تحذير: هذا الرمز، , عند استخدامه على المنتج، مخصص لتنبيه المستخدم فيما يتعلق بوجود جهد كهربائي غير معزول على الغلاف الخارجي للمنتج وهو ما قد ينطوي على مخاطر حدوث صدمة كهربائية.

انتبه: هذا الرمز، , عند استخدامه على المنتج، مخصص لتنبيه المستخدم بتعليمات التشغيل والصيانة الهامة (الخدمة) في المواد التي يتم توفيرها مع المعدات.

للحصول على المزيد من المعلومات حول إرشادات السلامة، والتوافق التنظيمية، والتوافق الكهرومغناطيسي/المجال الكهرومغناطيسي، وإمكانية الوصول، والموضوعات ذات الصلة، يرجى مراجعة دليل السلامة والتوافق التنظيمي www.extron.com الخاص بإكسترون، الجزء رقم 68-290-01، على موقع إكسترون.


Sicherheitsanweisungen • Deutsch


WARUNG: Dieses Symbol , auf dem Produkt soll den Benutzer darauf aufmerksam machen, dass im Inneren des Gehäuses dieses Produktes gefährliche Spannungen herrschen, die nicht isoliert sind und die einen elektrischen Schlag verursachen können.

VORSICHT: Dieses Symbol , auf dem Produkt soll dem Benutzer in der im Lieferumfang enthaltenen Dokumentation besonders wichtige Hinweise zur Bedienung und Wartung (Instandhaltung) geben.

Weitere Informationen über die Sicherheitsrichtlinien, Produkthandhabung, EMI/EMF-Kompatibilität, Zugänglichkeit und verwandte Themen finden Sie in den Extron-Richtlinien für Sicherheit und Handhabung (Artikelnummer 68-290-01) auf der Extron-Website, www.extron.com.


Instrucciones de seguridad • Español


ADVERTENCIA: Este símbolo, , cuando se utiliza en el producto, avisa al usuario de la presencia de voltaje peligroso sin aislar dentro del producto, lo que puede representar un riesgo de descarga eléctrica.

ATENCIÓN: Este símbolo, , cuando se utiliza en el producto, avisa al usuario de la presencia de importantes instrucciones de uso y mantenimiento estas están incluidas en la documentación proporcionada con el equipo.

Para obtener información sobre directrices de seguridad, cumplimiento de normativas, compatibilidad electromagnética, accesibilidad y temas relacionados, consulte la Guía de cumplimiento de normativas y seguridad de Extron, referencia 68-290-01, en el sitio Web de Extron, www.extron.com.


Instructions de sécurité • Français


AVERTISSEMENT : Ce pictogramme, , lorsqu'il est utilisé sur le produit, signale à l'utilisateur la présence à l'intérieur du boîtier du produit d'une tension électrique dangereuse susceptible de provoquer un choc électrique.

ATTENTION : Ce pictogramme, , lorsqu'il est utilisé sur le produit, signale à l'utilisateur des instructions d'utilisation ou de maintenance importantes qui se trouvent dans la documentation fournie avec l'équipement.

Pour en savoir plus sur les règles de sécurité, la conformité à la réglementation, la compatibilité EMI/EMF, l'accessibilité, et autres sujets connexes, lisez les informations de sécurité et de conformité Extron, réf. 68-290-01, sur le site Extron, www.extron.com.


Istruzioni di sicurezza • Italiano


AVVERTENZA: Il simbolo, , se usato sul prodotto, serve ad avvertire l'utente della presenza di tensione non isolata pericolosa all'interno del contenitore del prodotto che può costituire un rischio di scosse elettriche.

ATTENZIONE: Il simbolo, , se usato sul prodotto, serve ad avvertire l'utente della presenza di importanti istruzioni di funzionamento e manutenzione nella documentazione fornita con l'apparecchio.

Per informazioni su parametri di sicurezza, conformità alle normative, compatibilità EMI/EMF, accessibilità e argomenti simili, fare riferimento alla Guida alla conformità normativa e di sicurezza di Extron, cod. articolo 68-290-01, sul sito web di Extron, www.extron.com.


Instrukcje bezpieczeństwa • Polska


OSTRZEŻENIE: Ten symbol, , gdy używany na produkt, ma na celu poinformować użytkownika o obecności izolowanego i niebezpiecznego napięcia wewnątrz obudowy produktu, który może stanowić zagrożenie porażenia prądem elektrycznym.

UWAGI: Ten symbol, , gdy używany na produkt, jest przeznaczony do ostrzegania użytkownika ważne operacyjne oraz instrukcje konserwacji (obsługi) w literaturze, wyposażone w sprzęt.

Informacji na temat wytycznych w sprawie bezpieczeństwa, regulacji wzajemnej zgodności, zgodność EMI/EMF, dostępności i Tematy pokrewne, zobacz Extron bezpieczeństwa i regulacyjnego zgodności przewodnik, część numer 68-290-01, na stronie internetowej Extron, www.extron.com.

Инструкция по технике безопасности • Русский

ПРЕДУПРЕЖДЕНИЕ: Данный символ, , если указан на продукте, предупреждает пользователя о наличии неизолированного опасного напряжения внутри корпуса продукта, которое может привести к поражению электрическим током.

ВНИМАНИЕ: Данный символ, , если указан на продукте, предупреждает пользователя о наличии важных инструкций по эксплуатации и обслуживанию в руководстве, прилагаемом к данному оборудованию.

Для получения информации о правилах техники безопасности, соблюдении нормативных требований, электромагнитной совместимости (ЭМП/ЭДС), возможности доступа и других вопросах см. руководство по безопасности и соблюдению нормативных требований Extron на сайте Extron: , www.extron.com, номер по каталогу - 68-290-01.

安全说明 • 简体中文

警告: ⚠ 产品上的这个标志意在警告用户, 该产品机壳内有暴露的危险电压, 有触电危险。

注意: ⚠ 产品上的这个标志意在提示用户, 设备随附的用户手册中有重要的操作和维护(维修)说明。

关于我们产品的安全指南、遵循的规范、EMI/EMF 的兼容性、无障碍使用的特性等相关内容, 敬请访问 Extron 网站, www.extron.com, 参见 Extron 安全规范指南, 产品编号 68-290-01。

安全記事 • 繁體中文

警告: ⚠ 若產品上使用此符號, 是為了提醒使用者, 產品機殼內存在未隔離的危險電壓, 可能會導致觸電之風險。

注意: ⚠ 若產品上使用此符號, 是為了提醒使用者, 設備隨附的用戶手冊中有重要的操作和維護(維修)說明。

有關安全性指導方針、法規遵守、EMI/EMF 相容性、存取範圍和相關主題的詳細資訊, 請瀏覽 Extron 網站: www.extron.com, 然後參閱《Extron 安全性與法規遵守手冊》, 準則編號 68-290-01。

Copyright

© 2020 -2024 Extron. All rights reserved. www.extron.com

Trademarks

All trademarks mentioned in this guide are the properties of their respective owners. The following registered trademarks (®), registered service marks (SM), and trademarks (TM) are the property of RGB Systems, Inc. or Extron (see the current list of trademarks on the [Terms of Use](#) page at www.extron.com):

Registered Trademarks (®)
Extron, Cable Cubby, ControlScript, CrossPoint, DTP, eBUS, EDID Manager, EDID Minder, eLink, Flat Field, FlexOS, Glitch Free, Global Configurator, Global Scripter, GlobalViewer, Hideaway, HyperLane, IP Intercom, IP Link, Key Minder, LinkLicense, LockIt, MediaLink, MediaPort, NAV, NetPA, PlenumVault, PoleVault, PowerCage, PURE3, Quantum, ShareLink, Show Me, SoundField, SpeedMount, SpeedSwitch, StudioStation, System INTEGRATOR, TeamWork, TouchLink, V-Lock, VN-Matrix, VoiceLift, WallVault, WindoWall, XPA, XTP, XTP Systems, and ZipClip
Registered Service Mark (SM) : S3 Service Support Solutions
Trademarks (TM)
AAP, AFL (Accu-RATE Frame Lock), ADSP (Advanced Digital Sync Processing), AVEdge, CableCover, CDRS (Class D Ripple Suppression), Codec Connect, DDSP (Digital Display Sync Processing), DMI (Dynamic Motion Interpolation), Driver Configurator, DSP Configurator, DSVP (Digital Sync Validation Processing), EQIP, Everlast, FastBite, Flex55, FOX, FOXBOX, InstaWake+, IP Intercom HelpDesk, MAAP, MicroDigital, Opti-Torque, PendantConnect, ProDSP, QS-FPC (QuickSwitch Front Panel Controller), Room Agent, Scope-Trigger, SIS, Simple Instruction Set, Skew-Free, SpeedNav, Triple-Action Switching, True4K, True8K, Vector™ 4K, WebShare, XTRA, and ZipCaddy

安全上のご注意 • 日本語

警告: この記号 ⚠ が製品上に表示されている場合は、筐体内に絶縁されていない高電圧が流れ、感電の危険があることを示しています。

注意: この記号 ⚠ が製品上に表示されている場合は、本機の取扱説明書に記載されている重要な操作と保守(整備)の指示についてユーザーの注意を喚起するものです。

安全上のご注意、法規厳守、EMI/EMF適合性、その他の関連項目については、エクストロンのウェブサイト www.extron.com より『Extron Safety and Regulatory Compliance Guide』(P/N 68-290-01) をご覧ください。

안전 지침 • 한국어

경고: 이 기호 ⚠ 가 제품에 사용될 경우, 제품의 인클로저 내에 있는 접지되지 않은 위험한 전류로 인해 사용자가 감전될 위험이 있음을 경고합니다.

주의: 이 기호 ⚠ 가 제품에 사용될 경우, 장비와 함께 제공된 책자에 나와 있는 주요 운영 및 유지보수(정비) 지침을 경고합니다.

안전 가이드라인, 규제 준수, EMI/EMF 호환성, 접근성, 그리고 관련 항목에 대한 자세한 내용은 Extron 웹 사이트(www.extron.com)의 Extron 안전 및 규제 준수 안내서, 68-290-01 조항을 참조하십시오.

FCC Class B Notice

NOTE: This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. There is no guarantee that interference will not occur. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

In order to maintain compliance with FCC regulations, shielded cables must be used with this equipment. Operation with non-approved equipment or unshielded cables is likely to result in interference to radio and TV reception. The user is cautioned that changes and modifications made to the equipment without the approval of the manufacturer could void the user's authority to operate this equipment.

NOTE: For more information on safety guidelines, regulatory compliances, EMI/EMF compatibility, accessibility, and related topics, see the [Extron Safety and Regulatory Compliance Guide](#) on the Extron website.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Conventions Used in this Guide

Notifications

In this user guide, the following are used:



WARNING: Potential risk of severe injury or death.

AVERTISSEMENT : Risque potentiel de blessure grave ou de mort.

CAUTION: Risk of minor personal injury.

ATTENTION : Risque de blessure mineure.

ATTENTION:

- Risk of property damage.
- Risque de dommages matériels.

NOTE: A note draws attention to important information.

Specifications Availability

Product specifications are available on the Extron website, www.extron.com.

Extron Glossary of Terms

A glossary of terms is available at www.extron.com/technology/glossary.aspx.

Contents

Introduction.....	1
About this Guide	1
Product Description	1
Features	2
Application Example	3

Installation.....	4
Installation Overview	4
Mounting Instructions	4
Wall Plate	5
Installing the Wall Plate on a Non-masonry Wall	5
Installing the Wall Plate on a Masonry Wall	8
Attaching the SB 33 A to the Wall Plate	9
Mounting a Camera	12
Camera mounting behind the front cover	12
Mounting a PTZ camera with optional PTZ camera shelf	13
Attaching Power and Audio Sources to the SB 33 A.....	15
Attaching the Center Section Cover.....	18
Attaching the Optional Blank Grille	19
VESA Mounting Kits	20
SMK V SB 33 Plus VESA Mounting Kit.....	20
SMK V SB 33 82-100 VESA Mounting Kit.....	25
Aligning the SB 33 Speaker to the Display	30

Operation.....	31
SB 33 A Internal Amplifier Front Panel	31
Wiring for Remote Control.....	33
Audio Output	34
Internal Adjustments	34
Setting Input Level	34
Setting Bass and Treble	35

Reference Information	36
Defeating the Auto Power-down Timer	36
Troubleshooting.....	39
Amplifier Fails to Exit Standby Mode	
Promptly	39
Amplifier Enters Standby Mode Too Early.....	39

Extron Warranty.....	40
-----------------------------	-----------

Introduction

This section gives an overview of the Extron SB 33 A Series Sound Bar Speaker. Topics include:

- [About this Guide](#)
- [Product Description](#)
- [Features](#)
- [Application Example](#)

About this Guide

This guide describes the installation and setup of the SB 33 A Series Speaker.

In this guide, the terms “speaker” and “sound bar” are used interchangeably to refer to the SB 33 A Series Sound Bar Speaker.

NOTE: Observe all applicable building codes and local ordinances when installing the SB 33 A speaker.
--

Product Description

The SB 33 A is an adjustable-width sound bar speaker for use in small-to-medium conference rooms. It features two 3 inch (76 mm) full range speaker drivers, driven by an internal amplifier module. The SB 33 A speaker accepts balanced and unbalanced stereo input signals on three individually buffered inputs.

The SB 33 A is configurable for use with an internal webcam using the built-in adjustable shelf and window with a built-in door. It can also be configured to mount a PTZ (Pan-Tilt-Zoom) camera with optional shelf, or configured for no camera with the optional blank center grille. The SB 33 A sound bar enclosure is adjustable to match the width of the display and is mounted under the display. The SB 33 A is offered in six different sizes to accommodate screen sizes from 46 to 100 inches (117 to 254 cm), as shown in the table below.

Option	Fit Display Size (diagonal)	Fit Display Width	Speaker Module Width
SB 33 A 46-55	46" - 55"	40" - 49" (101.6 cm - 124.5 cm)	16.25" (41.3 cm)
SB 33 A 55-65	55" - 65"	48" - 57" (121.9 cm - 144.8 cm)	20.25" (51.4 cm)
SB 33 A 65-70	65" - 70"	56" - 65" (142.2 cm - 165.1 cm)	24.25" (61.6 cm)
SB 33 A 75-80	75" - 80"	64" - 73" (162.6 cm - 185.4 cm)	28.25" (71.8 cm)
SB 33 A 82-90	82" - 90"	72" - 81" (182.8 cm - 205.7 cm)	32.25" (81.9 cm)
SB 33 A 90-100	90" - 100"	80" - 89" (203.2 cm - 226.1 cm)	36.25" (92.1 cm)

Figure 1. SB 33 A Series Sizes and Widths Table

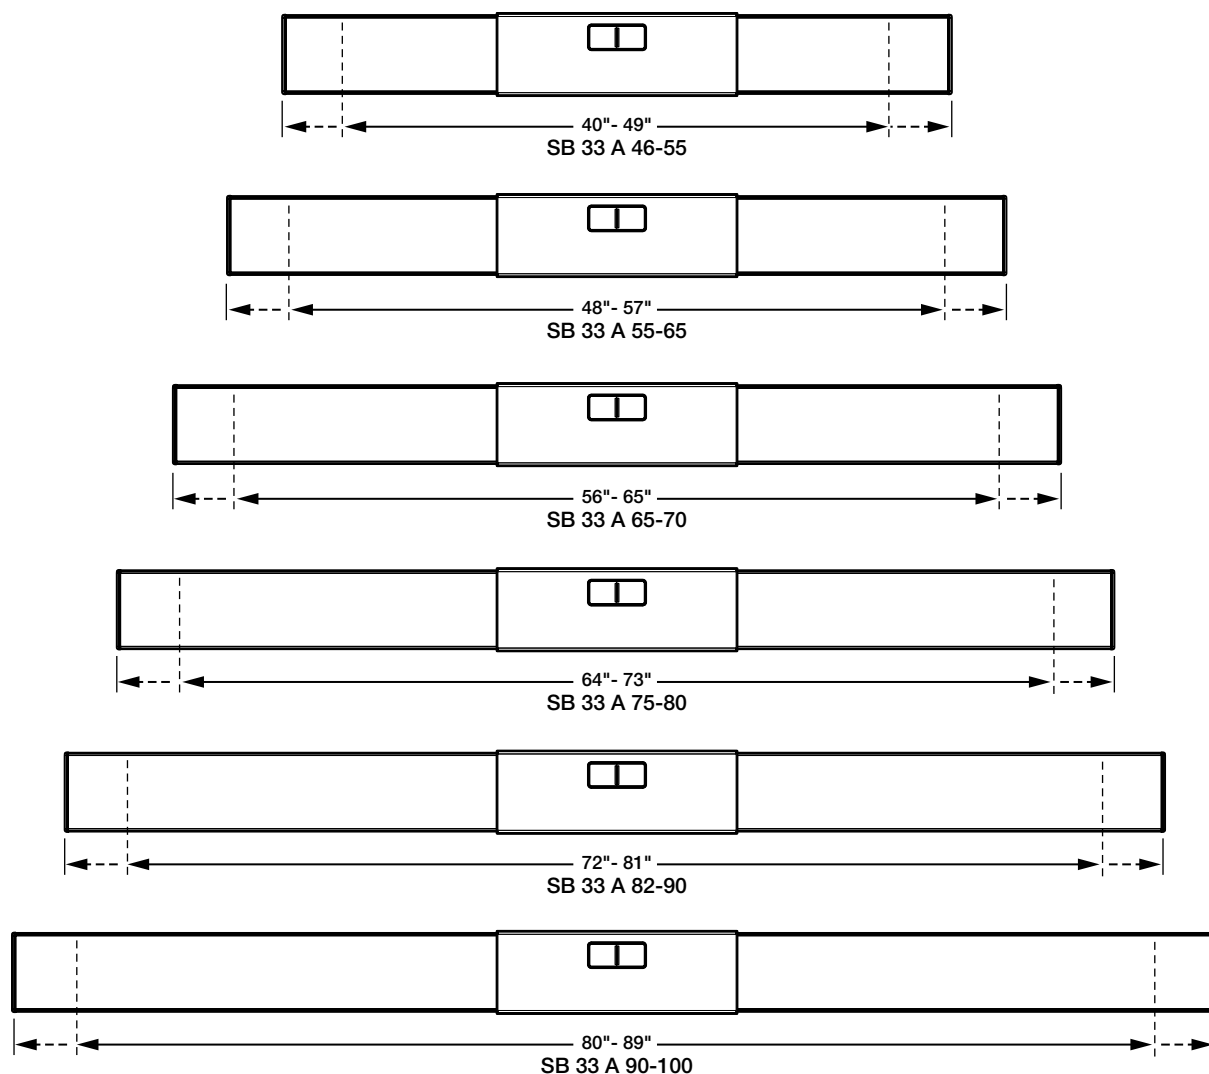


Figure 2. SB 33 A Series Model Options

The SB 33 A supports mounting directly to the wall under the display using the included wall plate. It can also be attached to an articulating display mount using the optional VESA mounting kit.

Features

- Provides enhanced audio quality for collaboration spaces.
- **Adjustable width to match the display** — Perfectly matches the width of any display from 46 to 100 inches (117 to 254 cm).
- **Configurable for an internal webcam, a PTZ camera, or no camera** — Suitable for self-contained huddle spaces or video conference rooms .
- **3 inch (76 mm) full-range drivers with a tuned port for bass extension** — Optimized for collaboration applications.
- **Frequency range: 100 Hz to 20 kHz.**
- **Internal Extron ENERGY STAR qualified Class D amplifier** — High performance stereo amplifier with CDRS, automatic clip limiter, and auto power-down with fast power-up.
- **Compatible with VCM series volume and mute controllers** — Can be used without a control system.
- **Compatible with select MLC controllers that include VCM volume and mute ports.**

- **Internal level, bass, and treble adjustments** — Once set, these controls are hidden and protected from tampering.
- **Optional VESA mounting kits.**
- **ADA compliant when used with the included wall bracket** — Protrudes less than 4 inches (102 mm) from the wall.

Application Example

The following diagram shows a typical SB 33 A Series installation.

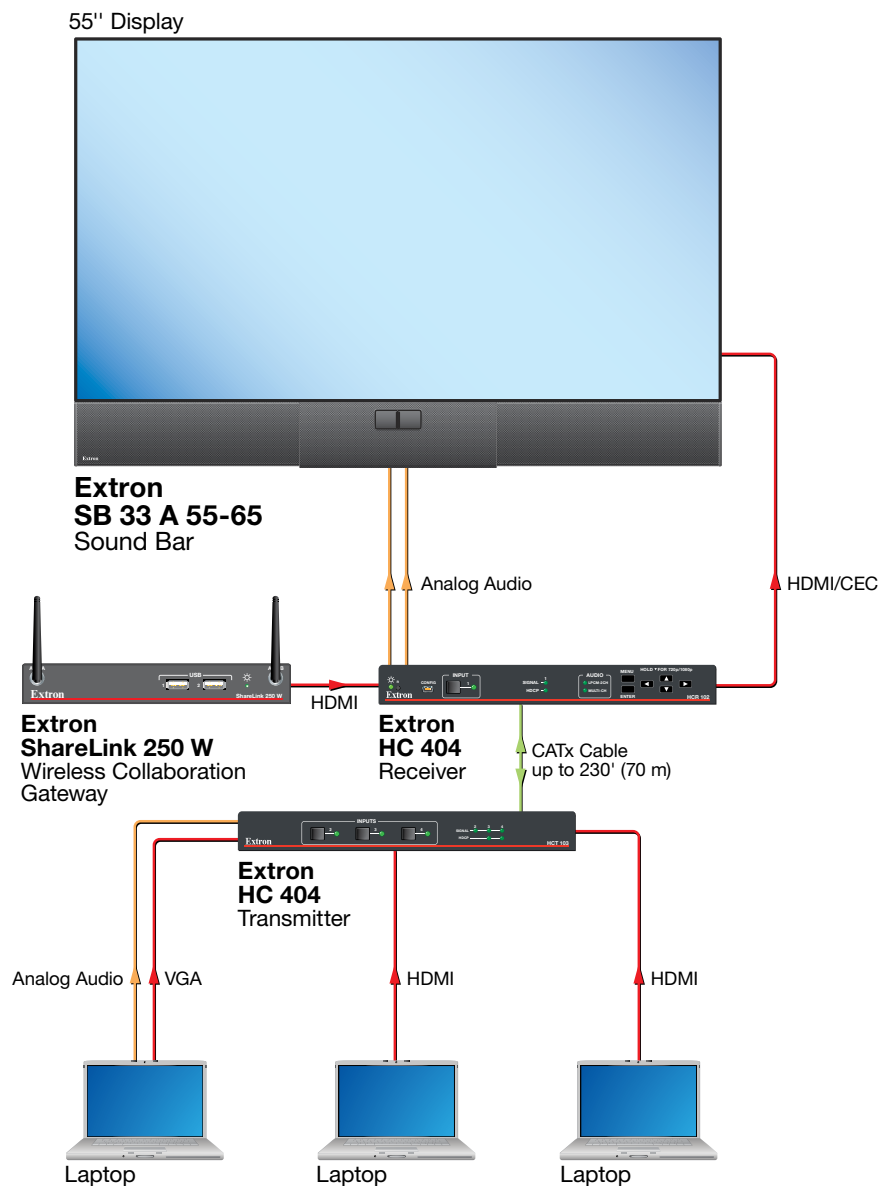


Figure 3. An Example of a SB 33 A System Installation

Installation

Topics covered in this section of the guide include the following:

- [Installation Overview](#)
- [Mounting Instructions](#)
- [Mounting a Camera](#) on page 12
- [VESA Mounting Kits](#)

Installation Overview

Use the included wall plate to mark where the SB 33 A sound bar is to be mounted.


Attach the wall plate to the wall.

NOTE: Install the wall plate onto wall material using common installation methods with applicable hardware dictated per local building code.

Attach the SB 33 A to the wall plate.

The following section describes the mounting procedure for safely and securely mounting the speaker.

Mounting Instructions

 **WARNING:** Risk of personal injury or property damage. The final installation should be able to continuously support the speaker weight. The final installation should also be able to support any short term overloading. Since applications can vary considerably, it is assumed that the installer will exercise good judgment when selecting the mounting location, method, and hardware. Installation and service must be performed by authorized personnel only.


AVERTISSEMENT: Risque de dommages corporels ou matériels. L'installation finale doit pouvoir supporter en permanence le poids de l'enceinte. L'installation finale doit également supporter toute surcharge temporaire. Étant donné la possibilité d'évolution considérable des applications, il est supposé que l'installateur fera preuve de discernement lors de la sélection de l'emplacement, du mode, et du matériel de montage. L'installation et la maintenance du système doivent être exclusivement effectuées par le personnel autorisé.

ATTENTION:


- All structural steps and electrical installation must be performed by qualified personnel in accordance with local and national building codes and electrical codes.
- Toute étape structurelle et installation électrique doit être effectuée par un personnel qualifié, conformément aux codes de sécurité de bâtiments et de produits électriques en vigueur à l'échelle régionale et nationale.

Wall Plate

The wall plate for the SB 33 A 46-55, SB 33 A 55-65, SB 33 A 65-70, and SB 33 A 75-80 models ships as a single piece that is 36.5 inches (92.8 cm) long.



The wall plate for the SB 33 A 82-90, and SB 33 A 90-100 models ships as two pieces, each 28 inches (71.3 cm) long, a joining bracket and four 5/16" black flat top machine screws. They are assembled, as shown below, to create a wall plate that is 56 inches (142.3 cm) long.



To assemble the wall plate for the SB 33 A 82-90 and SB 33 A 90-100 models:

1. Place the two parts of the wall plate side-by-side.
2. Place the joining bracket over the front of the join as shown above.
3. Insert the screws from the back, through the wall plate, and into the joining bracket.
4. The screws should be inserted loosely until all four are in place.
5. Tighten the screws to secure both halves of the wall plate so that the assembly is rigid.

The illustrations in the following sections show how to mount an SB 33 series model, using the shorter wall plate. Mounting the larger SB 33 A models with the longer wall plate is identical.

Installing the Wall Plate on a Non-masonry Wall

NOTE: To attach the wall plate to masonry, see [Installing the Wall Plate on a Masonry Wall](#) on page 8.

1. Position and level the included wall plate (see figure 4 on the following page) under the display screen (see figure 5 on the following page) and mark the locations of the wall studs through the top vertical slots and bottom horizontal slots where screws (not included) will secure the SB 33 A speaker wall plate to the wall.

NOTES:

- If the wall plate cannot be attached to two studs, the wall plate can be offset such that one side of the wall plate can be attached to one stud and the other end of the wall plate can be attached to the wall using two (not included) 1/4" Kap Toggles. If the stud must come down the middle of the wall plate, secure the wall plate to the stud using two screws and to the wall using two (not included) 1/4" Kap Toggles (one on the leftmost top slot and one on the rightmost top slot).
- The center of the wall plate does not need to be precisely aligned with the center of the display above it because the speaker module on either end of the wall plate can be adjusted on the wall plate.

2. If necessary, cut a hole in the wall to route cables to the SB 33 A speaker.




Figure 4. Wall Plate

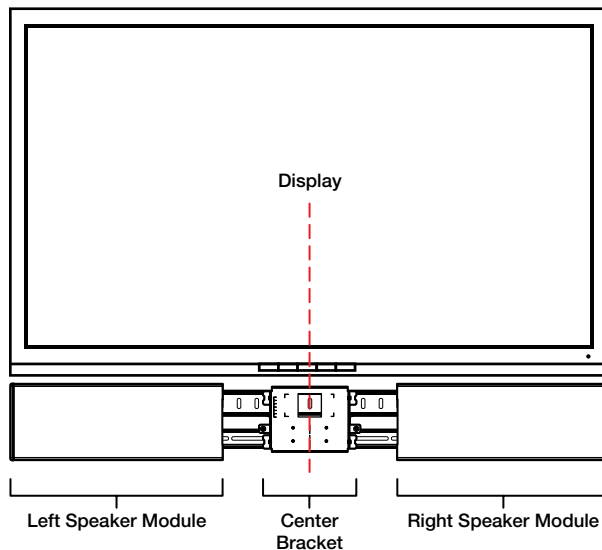


Figure 5. Display Screen and SB 33 A Alignment

NOTES:

- Assuming that the display screen is level, allow for some space between the bottom of the display screen and the top of the speaker because the speaker assemblies and the center bracket attach to the wall plate by hooking the top mounting clasps of the speaker assemblies and center bracket over the top mounting rail of the wall plate.
- To allow sufficient clearance between the top of the SB 33 A and the display screen above it, allow for at least a minimum clearance of 11/16 inches (17.5 mm) between the highest part of the top rail of the wall plate and the top of the speaker, as shown below. The display screen should not encroach into this area above the top rail.

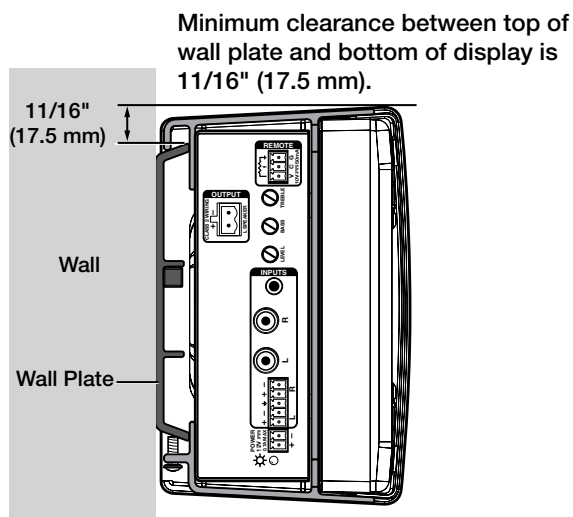


Figure 6. Positioning the Wall Plate

3. Before starting the installation, remove the center section assembly from the packaging and disassemble as indicated in the following order:

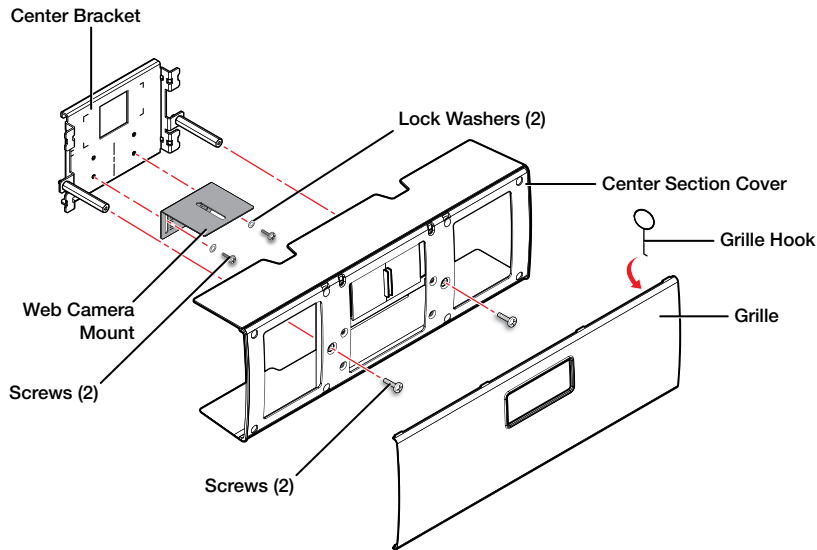


Figure 7. Disassembling the Center Section Assembly

- a. Remove the front grille from the center section cover using a grille hook.
 - b. Remove the center section cover from the center bracket standoffs by removing the two screws.
 - c. Remove the web camera mount from the center bracket (if necessary) by removing the two screws and lock washers that attach it to the center bracket.
4. Drill four pilot holes through the marked locations on the wall.
 5. Screw the wall plate to the wall studs using four #14 x 1 3/4" self-tapping wood or metal screws and four 1/4" SAE washers into the pilot holes (see figure 8).

NOTE: Use wood or metal screws depending on whether the studs are wood or metal.

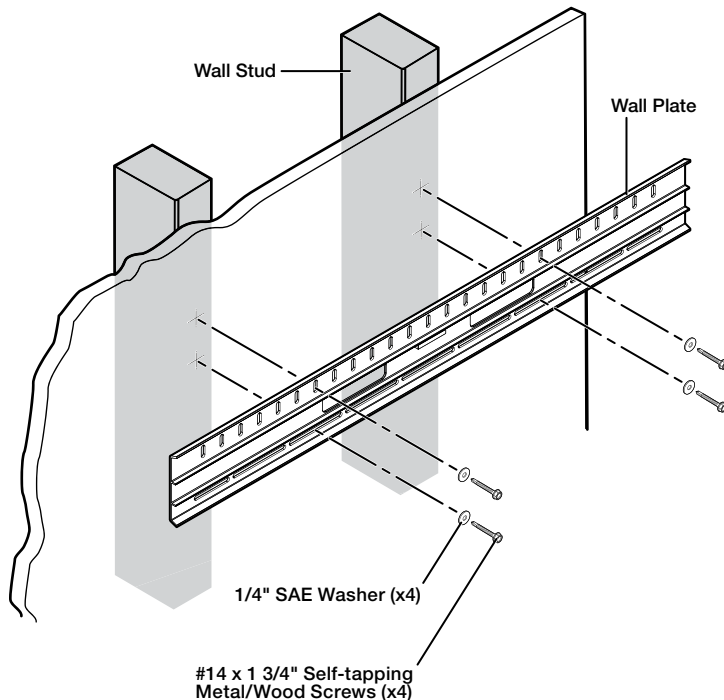


Figure 8. Attach the Wall Plate to Studs

Installing the Wall Plate on a Masonry Wall

Mount the wall plate on a brick, stone, or concrete wall by doing the following:

NOTE: The center of the wall plate does not need to be precisely aligned with the center of the display above it because the speakers on either end of the wall plate may still be adjustable on the wall plate.

1. Follow steps 1 to 3 of [Installing the Wall Plate on a Non-masonry Wall](#) on page 5.

NOTE: Because masonry installation does not involve wall studs, position the wall plate so that the mounting holes evenly distribute the weight of the SB 33 A.

2. Using a masonry drill bit, drill four pilot holes in the masonry wall at the locations you marked in step one.

NOTE: If you drill the pilot hole too shallow, the screw head might break off while it is being fastened into the hole.

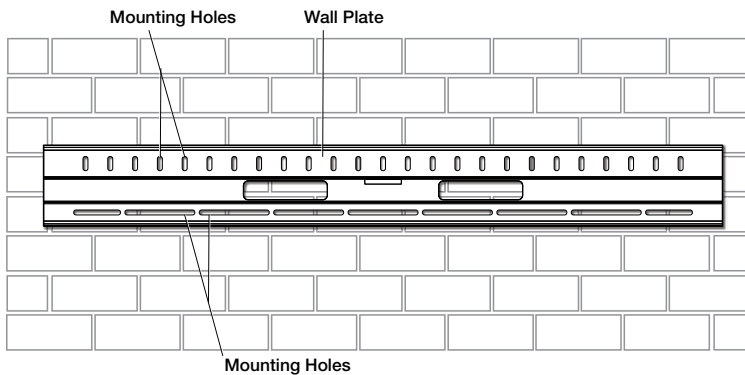


Figure 9. Positioning the Wall Plate on Masonry

3. For each pilot mounting hole:
 - a. Insert a 1/4" x 1 3/4" masonry screw through a 1/4" SAE washer.
 - b. Position the wall plate over the pilot holes
 - c. Insert each screw and washer through the wall plate and into the pilot hole.

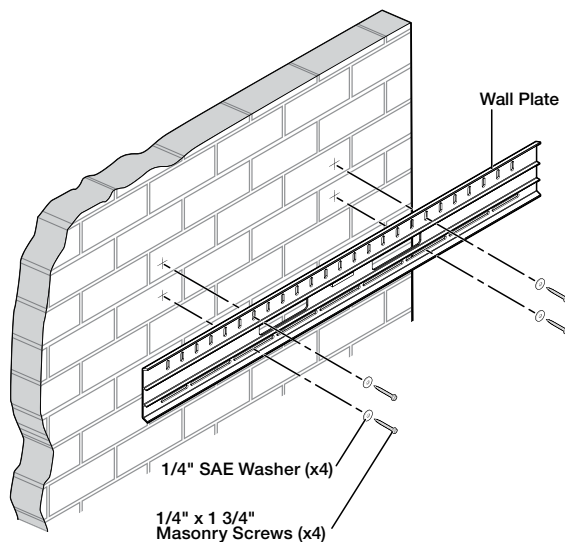


Figure 10. Attaching the Wall Plate to Masonry

- d. Securely tighten the four screws to the wall plate.

Attaching the SB 33 A to the Wall Plate

ATTENTION:

- When attaching either speaker assembly or the center section to the wall plate, avoid damaging or scratching the speaker assembly and center section cover.
- Lorsque vous fixez les enceintes ou la section centrale à la plaque murale, prenez garde à ne pas endommager ni à rayer les enceintes et le couvercle de la section centrale.

1. Hook the top clasp edge of the left speaker assembly over the top rail (see figure 11, ①) of the wall plate and slide it to left end of the wall plate (②) so that the left end of the speaker assembly is aligned with the left end of the display.

Tighten the two set screws (③) on the bottom of the left speaker assembly to the bottom rail of the wall plate.

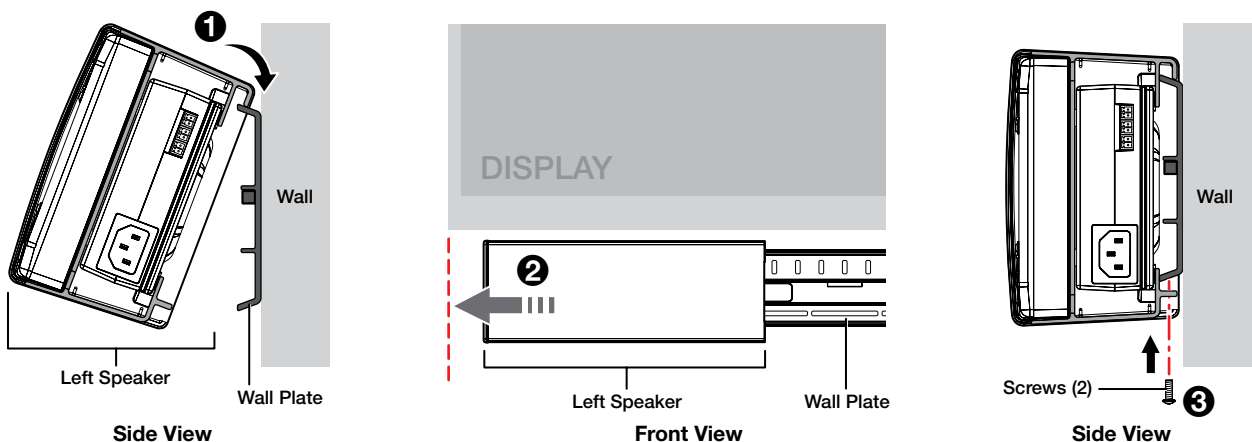


Figure 11. Attaching the Left Speaker to the Wall Plate

2. Hook the top clasp edge of the right speaker assembly over the top rail (see figure 12, ①) of the wall plate and slide it to right end of the wall plate (②) so that the right end of the speaker assembly is aligned with the right end of the display.
3. Tighten the two set screws (③) on the bottom of the right speaker assembly to the bottom rail of the wall plate.

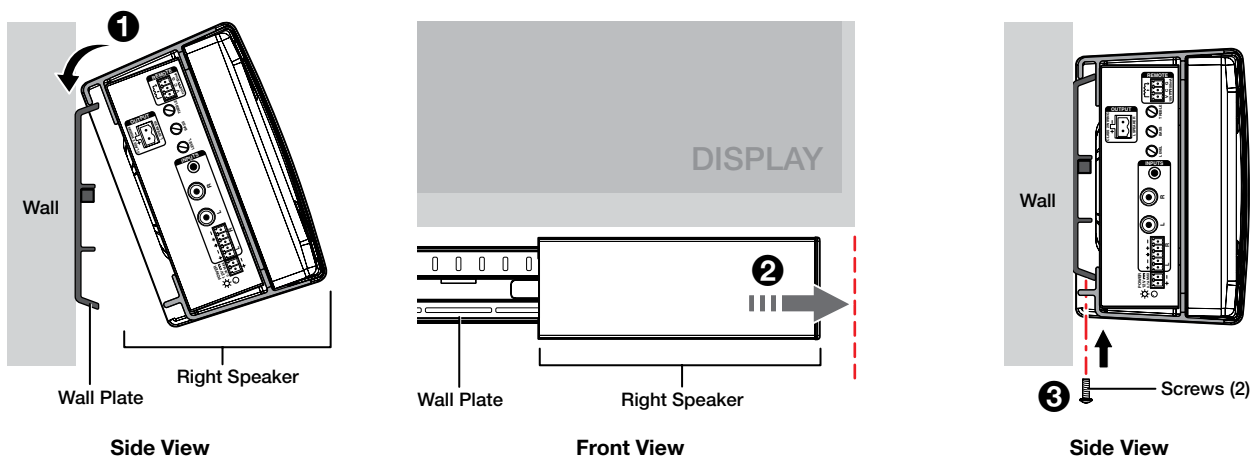


Figure 12. Attaching the Right Speaker to the Wall Plate

4. Route the supplied power cable from the power supply in the left speaker enclosure to the power input connector of the amplifier in the right speaker enclosure.

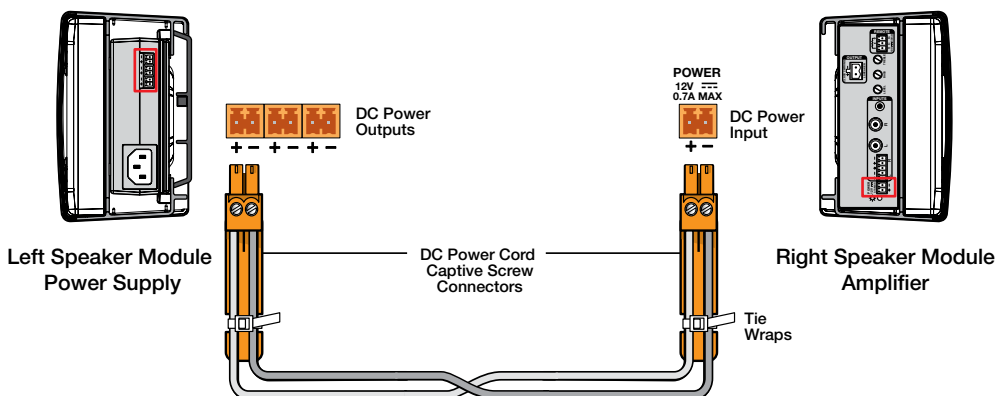


Figure 13. Power Supply to Amplifier Cable Routing

ATTENTION:

- Always use a power supply supplied by or specified by Extron. Use of an unauthorized power supply voids all regulatory compliance certification and may cause damage to the supply and the end product.
- L'utilisation d'une source d'alimentation non autorisée annule toute certification de conformité réglementaire, et peut endommager la source d'alimentation et l'unité.
- The installation shall be in accordance with the applicable provisions of National Electrical Code ANSI/NFPA 70, article 725 and the Canadian Electrical Code part 1, section 16.
- Cette installation doit toujours être conforme aux dispositions applicables du Code américain de l'électricité (National Electrical Code) ANSI/NFPA 70, article 725, et du Code canadien de l'électricité, partie 1, section 16.
- The length of the exposed wires in the stripping process is critical. The ideal length is 3/16 inches (5 mm). Any longer and the exposed wires may touch, causing a short circuit between them. Any shorter and the wires can be easily pulled out even if tightly fastened by the captive screws.
- La longueur des câbles exposés est primordiale lorsque l'on entreprend de les dénuder. La longueur idéale est de 5 mm (3/16 inches). S'ils sont trop longs, les câbles exposés pourraient se toucher et provoquer un court-circuit. S'ils sont trop courts, ils peuvent être tirés facilement, même s'ils sont correctement serrés par les borniers à vis.
- Do not tin the wires. Tinned wires are not as secure in the captive screw terminals and could pull out.
- Ne pas étamer les câbles. Les câbles étamés ne sont pas aussi bien fixés dans les borniers à vis et pourraient s'arracher.

5. Route the supplied speaker cable from the left speaker module to the left speaker output of the amplifier (see figure 14, ②).

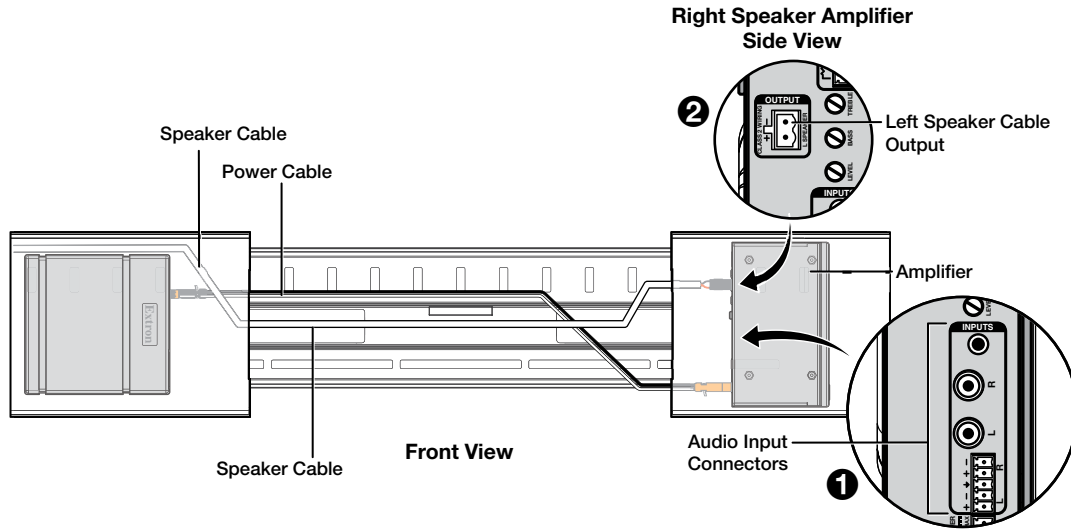


Figure 14. Left Speaker Cable Routing

6. Hook the top clasp edge of the center bracket over the top rail (see figure 15, ①) of the wall plate and slide it to center of the display.

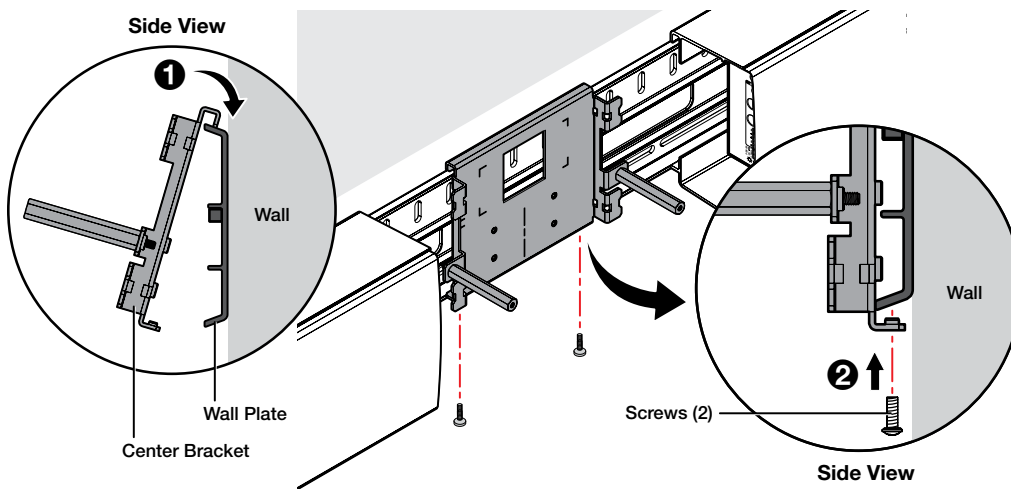


Figure 15. Center Bracket to Wall Plate Installation

7. Tighten the two set screws (2) on the bottom of the center bracket to the bottom rail of the wall plate.

NOTE: If a camera is to be mounted to the center bracket, see [Mounting a Camera](#) on page 12 before proceeding to the next step.

Mounting a Camera

The SB 33 A speaker can accommodate a camera mounted to the center bracket. A small webcam can be mounted behind the center cover, and a larger PTZ camera can be mounted in front of the center cover using an optional PTZ camera shelf.

NOTE: If mounting a PTZ Camera, see [Mounting a PTZ camera with optional PTZ camera shelf](#) on page 13. Both the webcam camera shelf and the PTZ camera shelf use the same two attaching screws and lock washers.

Camera mounting behind the front cover

A webcam can be installed using the included webcam shelf.

1. Install the webcam shelf by attaching it to the center bracket using two screws going through the two vertical slots on the shelf and into two mounting holes in the bracket. There are two pairs of available holes in the bracket. The shelf height can be adjusted by positioning the screws in the shelf slots (see figure 16, **1**).

NOTE: For cameras that require more overhead clearance, the webcam shelf can be inverted (see figure 16, Option 2).

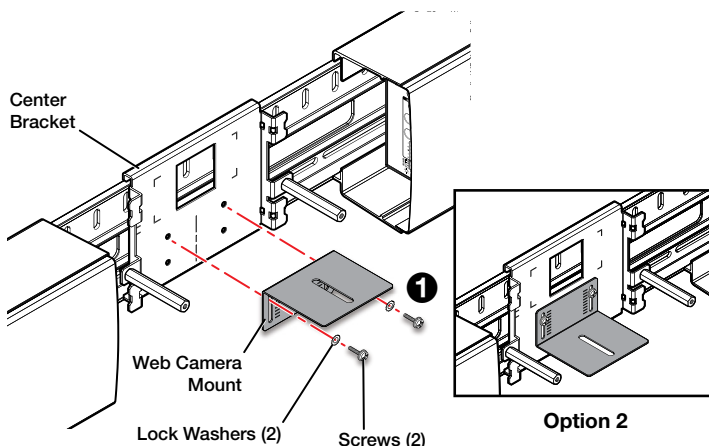


Figure 16. Inverting the Webcam Shelf

2. A screw is inserted in the bottom slot of the shelf (see figure 17, ②) to secure the webcam.

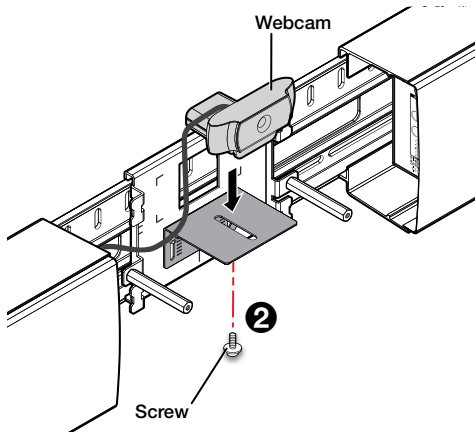


Figure 17. Securing the Webcam to Shelf

3. See [Attaching Power and Audio Sources to the SB 33 A](#) on page 16 to continue the installation.

Mounting a PTZ camera with optional PTZ camera shelf

A larger PTZ camera that takes up more space can be installed in front of the front cover using the optional PTZ camera shelf. Follow the steps below.

ATTENTION:

- The PTZ camera cannot exceed 4 lbs. (1.81 kg).
- La caméra PTZ ne peut peser plus de 1,81 kg (4 lb).

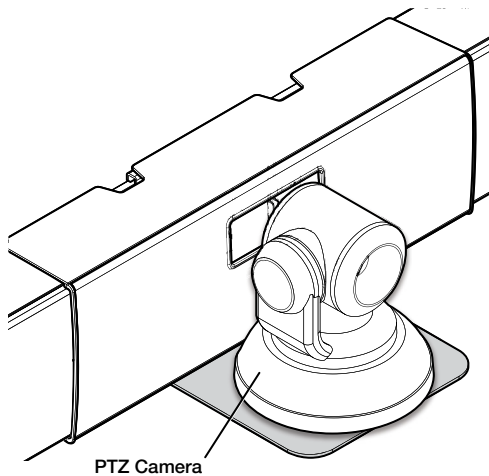


Figure 18. PTZ Camera on PTZ Camera Shelf

1. Install the PTZ camera shelf by attaching it to the center bracket using two screws and lock washers going through the vertical slots on the shelf and into two mounting holes in the bracket. There are two pairs of available holes in the bracket. The shelf height can be adjusted by positioning the screws in the shelf slots.

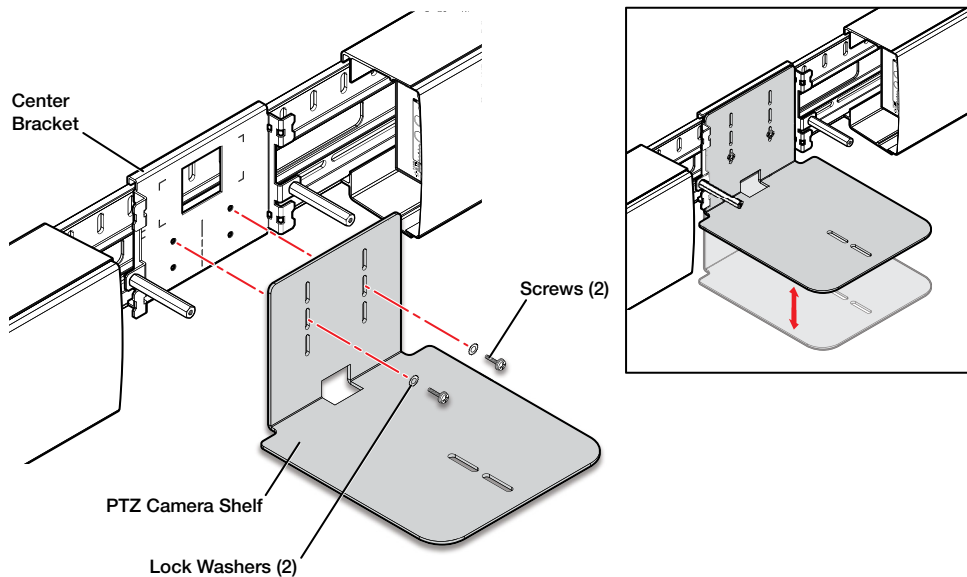


Figure 19. Attaching the PTZ Camera Shelf

2. To install a PTZ camera, follow the steps below:

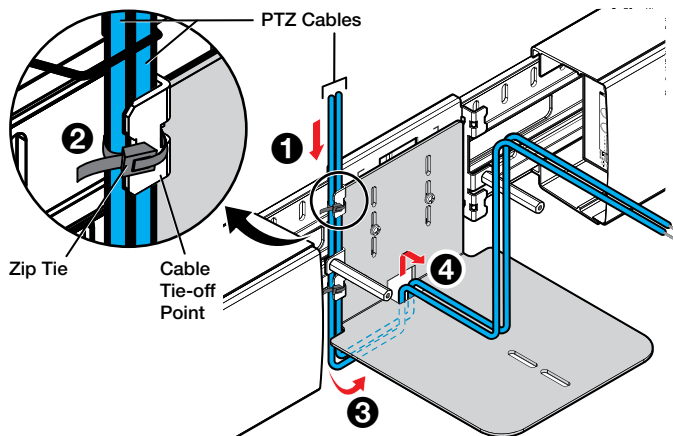


Figure 20. Routing the PTZ Camera Cable

- a. Route the PTZ cable to the PTZ camera through the center section cover (see figure 20, **1**) and along a center bracket cable tie-off point (**2**).
 - b. Route the cable to the camera shelf (**3**).
 - c. Route the cable through the access hole at the rear of the camera shelf (**4**).
3. See [Attaching Power and Audio Sources to the SB 33 A](#) on page 16 before continuing with the next steps.
 4. If the optional blank grille is being installed, see [Attaching the Center Section Cover](#) on page 19.

5. Slide the center section cover over the center bracket and attach the two cover screws to the center bracket standoffs being careful not to overtighten the screws (see figure 21).

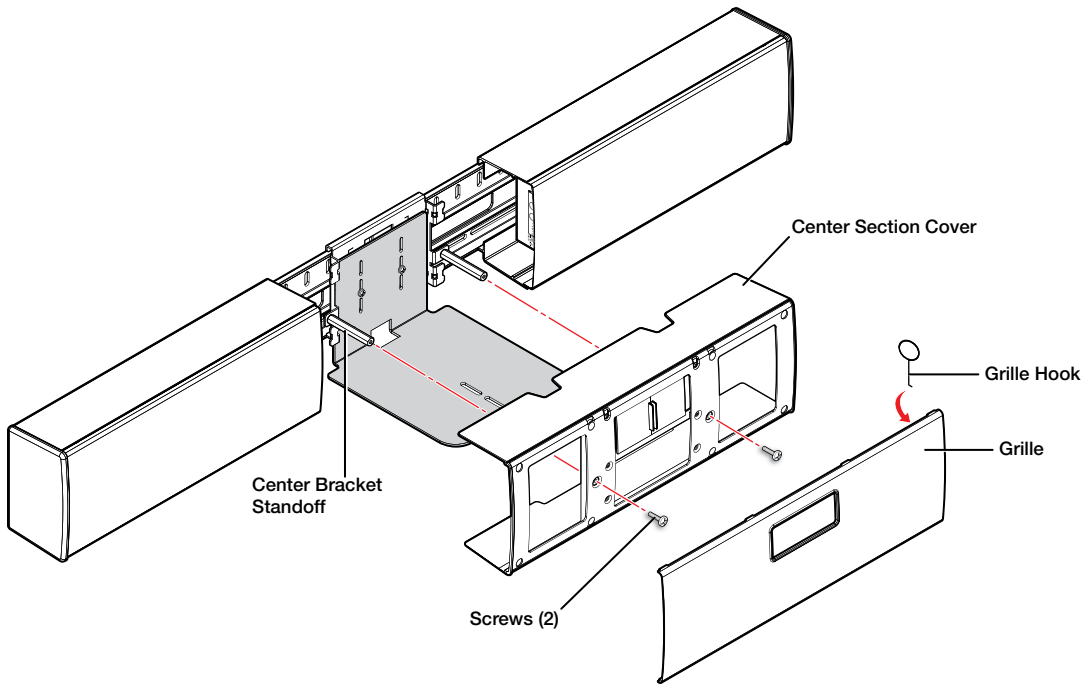


Figure 21. Attaching the Center Section Cover

6. Attach the grille to the center section cover (see figure 21).

NOTE: Two grille hooks are included to facilitate grille removal while avoiding damage to the grille. It is best to insert the hook along the top or bottom outer edge of the grille, as shown in figure 21, above.

7. Route the cable to the PTZ camera (see figure 22, ①) and attach it to the camera.
8. Place the camera on the shelf and attach it to the shelf with the mounting screw (②).

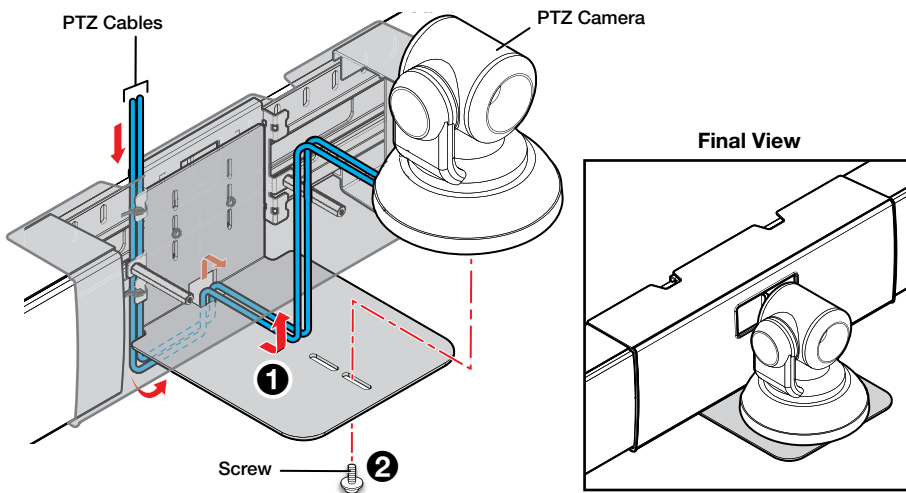


Figure 22. Attaching the PTZ Camera to the Shelf

Attaching Power and Audio Sources to the SB 33 A

The SB 33 A has a power supply for the amplifier housed in the left speaker enclosure. The power supply has an AC power input connector (see figure 23, **A**) and a DC power output connector (**B**) that routes power to the amplifier.

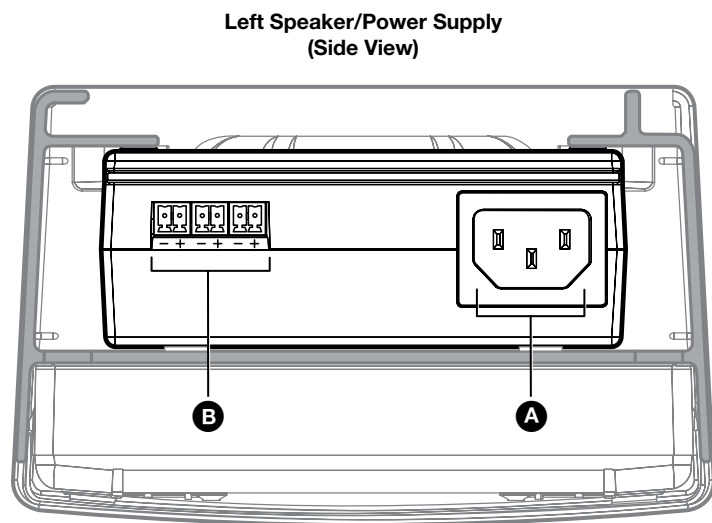


Figure 23. AC Input and DC Output Power Connectors

This section describes how the power and audio sources are attached to the SB 33 A, as shown in the following steps.

NOTE: Speaker and DC power cables must be routed before attaching the center bracket to the wall plate.
See [figure 14](#) on page 11.

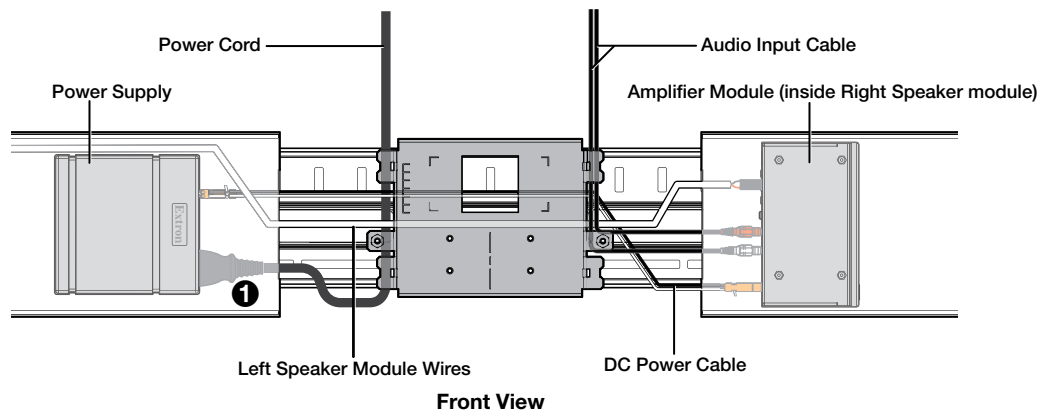


Figure 24. Speaker and DC Power cable routing

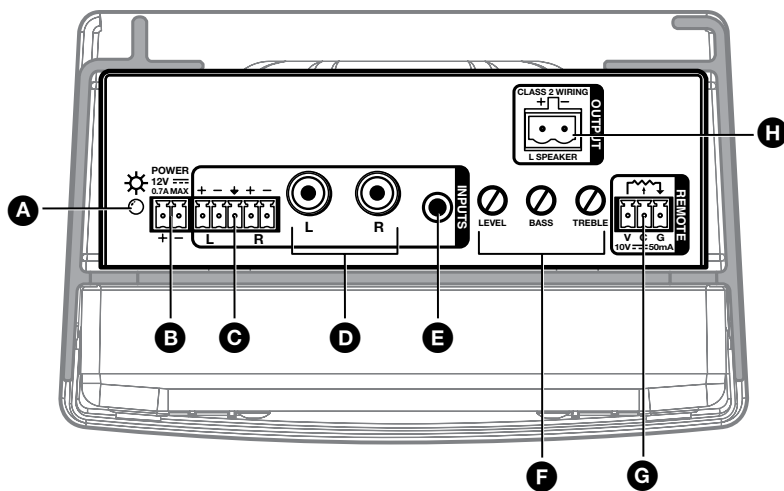


Figure 25. SB 33 A Amplifier Front Panel

- | | |
|---|---|
| A Power LED | E 3.5 mm unbalanced stereo input jack |
| B Amplifier power supply connector | F Level, bass, and treble potentiometers |
| C Captive screw balanced or unbalanced audio input connector | G Remote volume control connector |
| D RCA unbalanced stereo input connectors | H Left speaker output receptacle (to left speaker) |

For a detailed description of the above connectors see [SB 33 A Internal Amplifier Front Panel](#) on page 32.

1. Wiring access points for the power and speaker cables to the SB 33 A are shown below.

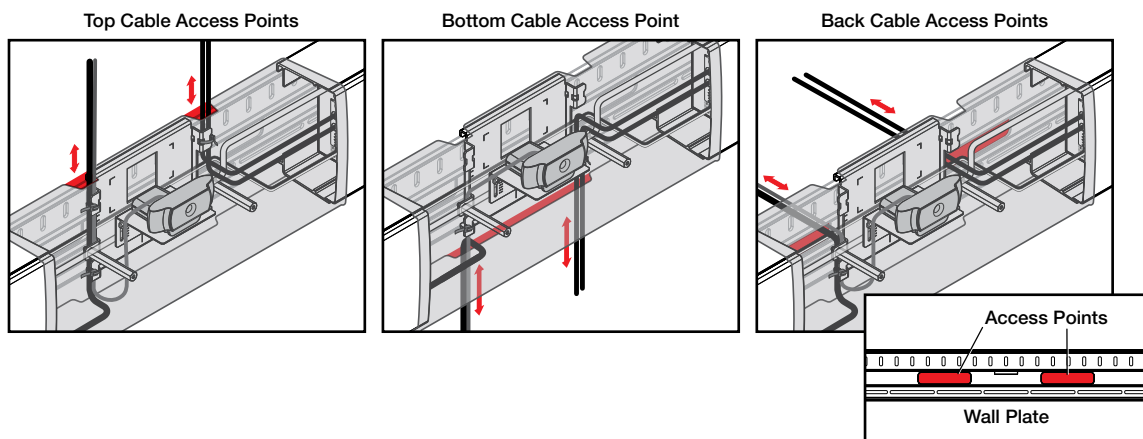


Figure 26. Power and Speaker Cable Routing

2. Secure the cables with zip ties to cable tie off points located on the center bracket, as shown in figure 27.

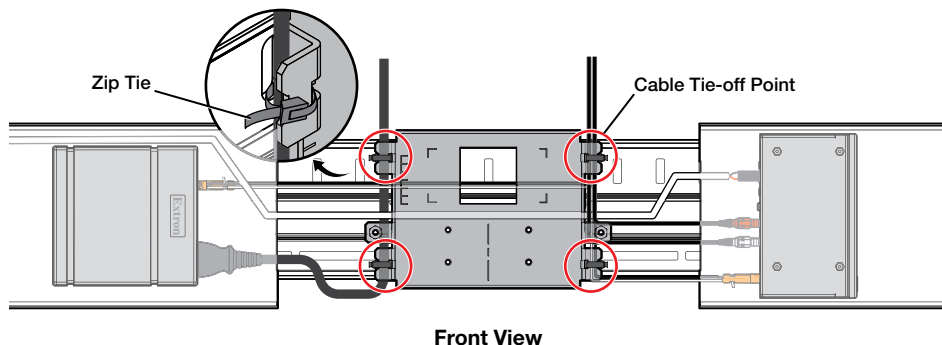


Figure 27. Securing Cables with Zip Ties

3. Route the audio cable from the display to the audio input connectors of the power amplifier (see figure 28, ❶) in the right speaker assembly. See the cable access points illustration in figure 26.

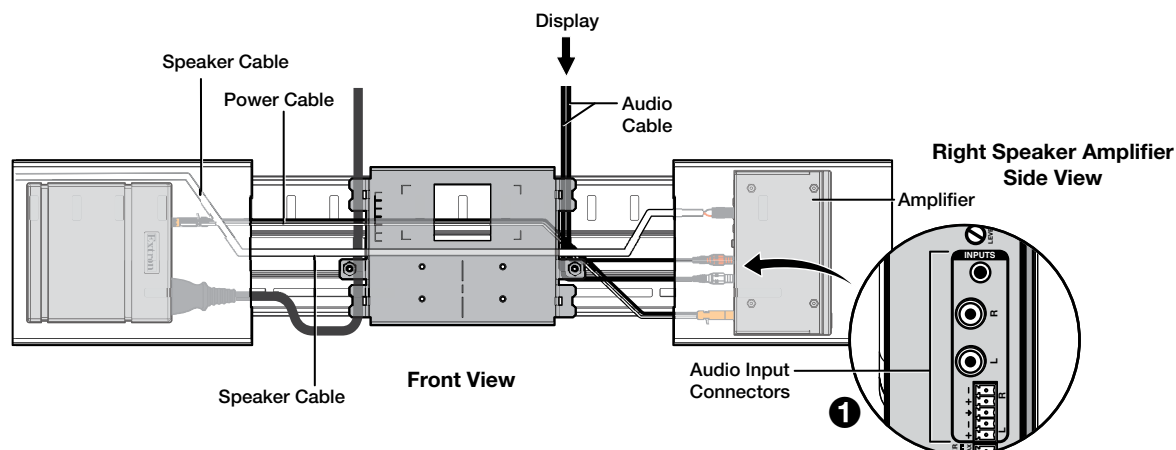


Figure 28. Routing Speaker Cables from the Display

4. Connect the power cord to the power supply in the left speaker assembly (see figure 29, ❶).

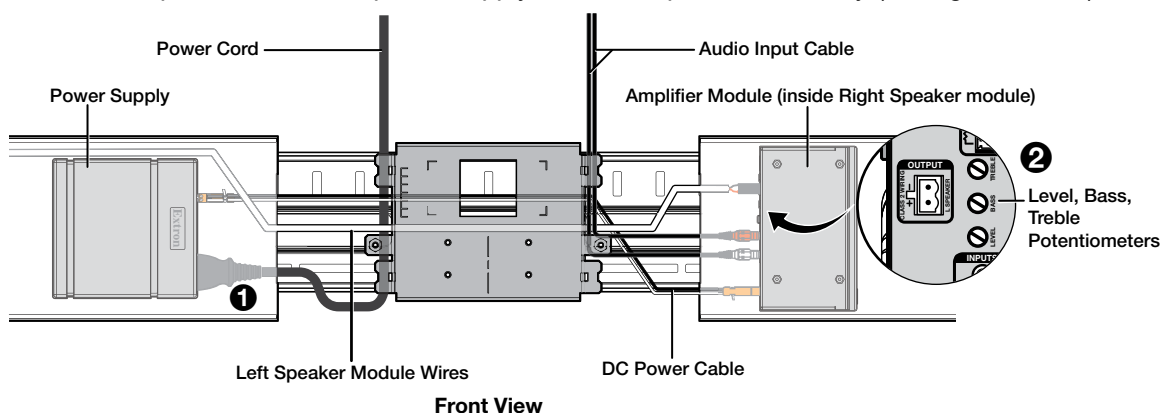


Figure 29. Connecting Power to the Power Supply

Set the level, bass, and treble potentiometers (❷) appropriately.

Attaching the Center Section Cover

1. Slide the center section cover over the center section and attach the two cover screws to the center bracket standoffs being careful not to overtighten the screws (see figure 30).

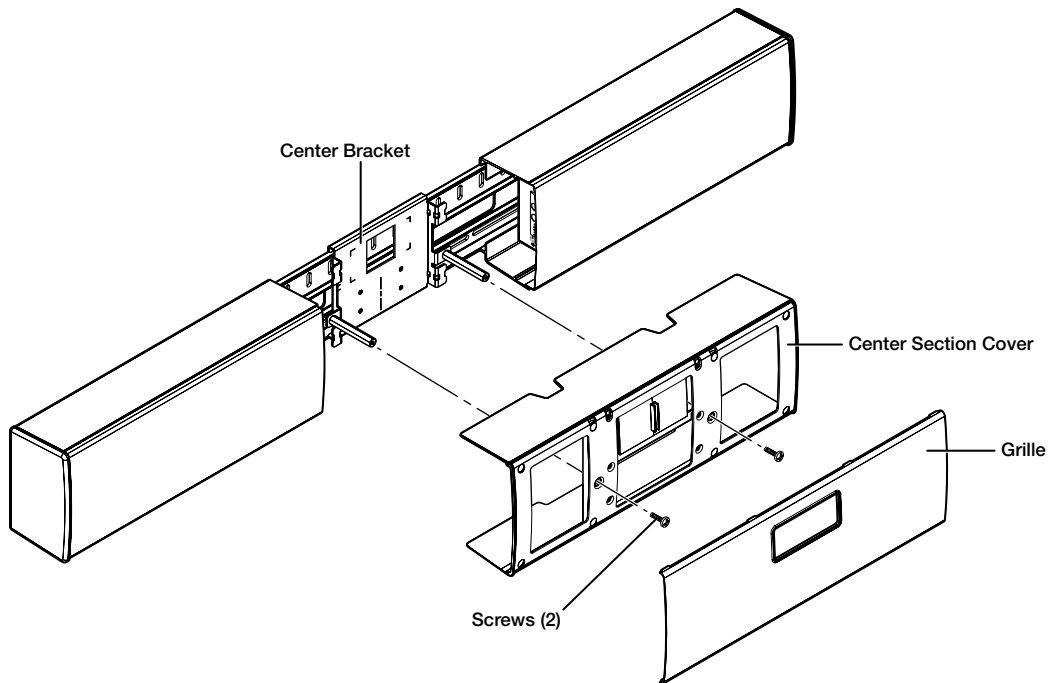


Figure 30. Attaching the Center Section Cover and Grille

2. Attach grille to the center section cover (see figure 30).

NOTE: Two grille hooks are included to facilitate grill removal while avoiding damage to the grille. It is best to insert the hook along the outer edge of the grille.

Attaching the Optional Blank Grille

The optional blank grille can be attached to the center section cover by following the steps below.

1. If a grille is attached, use the grille hooks to remove the grille.

NOTE: Two grille hooks are included to facilitate grill removal while avoiding damage to the grille. It is best to insert the hook along the outer edge of the grille.

2. Remove the four screws that attach the center section cover doors to the center section cover. Two door rails behind the cover and the sliding doors are separated from the center section cover after the screws are removed.

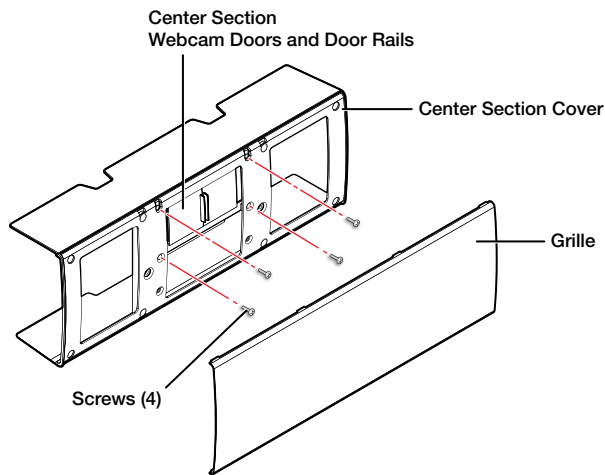


Figure 31. Attaching the Blank Grille

3. Remove the center section webcam doors and door rails (not shown).
4. Attach the blank grille to the center section cover.

VESA Mounting Kits

Extron provides two optional VESA mounting kits (must be purchased separately):

- **SMK V SB 33 Plus VESA Mounting Kit** — For SB 33 A 46-55, SB 33 A 55-65, SB 33 A 65-70, and SB 33 A 75-80 models.
- **SMK V SB 33 82-100 VESA Mounting Kit** — For SB 33 A 82-90 and SB 33 A 90-100 models.

SMK V SB 33 Plus VESA Mounting Kit

The SMK V SB 33 Plus VESA Mounting Kit is used to attach the SB 33 A Series of soundbar speakers (models SB 33 A 46-55, SB 33 A 55-65, SB 33 A 65-70, and SB 33 A 75-80) to the same VESA display mount supporting the display device. This type of installation enables the SB 33 speaker to be aligned with the display for a visually appealing installation. The SB 33 front speaker surface can be adjusted flush with the front of the display. It can be adjusted forward, backward, up, down, and side-to-side.

VESA display mounts come in a variety of different styles, so these instructions for installing the SMK V SB 33 Plus VESA Mounting Kit are variable. Consult the installation guides for your specific VESA display mount and your display device before installing our kit. Follow the steps below to install the kit.

⚠ WARNING: Risk of personal injury or property damage. The final installation should be able to continuously support the speaker weight. The final installation should also be able to support short term overloading. Be sure to not exceed the load limit of the VESA mount, mounting surface, and SMK V SB 33 Plus. The maximum load limit of the SMK V SB 33 Plus is 85 lb (38 kg). Since applications can vary considerably, it is assumed that the installer will exercise good judgment when selecting the mounting location, method, and hardware. Installation and service must be performed by authorized personnel only.

AVERTISSEMENT: Risque de dommages corporels ou matériels. L'installation finale doit pouvoir supporter en permanence le poids de l'enceinte. L'installation finale doit également pouvoir supporter une courte surcharge. Veillez à ne pas dépasser la charge maximale du support de montage VESA, de la surface de montage, et de l'unité SMK V SB 33 Plus. La charge maximale du SMK V SB 33 Plus est de 38 kg. Étant donné la possibilité d'évolution considérable des applications, il est supposé que l'installateur fera preuve de discernement lors de la sélection de l'emplacement, du mode, et du matériel de montage. L'installation et la maintenance du système doivent être exclusivement effectuées par un technicien agréé.

ATTENTION:

- All structural steps and electrical installation must be performed by qualified personnel in accordance with local and national building codes and electrical codes.
- Toute étape structurelle et installation électrique doit être effectuée par un personnel qualifié, conformément aux codes de sécurité de bâtiments et de produits électriques en vigueur à l'échelle régionale et nationale.

The SMK V SB 33 Plus VESA Mounting Kit is composed of two long L-brackets, two short L-brackets, four metal washers/spacers, four plastic spacers, six bolts, six lock washers, and six wingnuts.

1. Install the wall mount portion of the VESA display mount onto the desired wall location (see figure 32 on the following page).
2. Position one long L-bracket of the SMK V Plus kit on the back of the display, while aligning the bottom bolt hole on the display with a round hole on the L-bracket and the top bolt hole with one of the slotted holes. The L-bend of the long bracket should align with the bottom of the display device.
3. Repeat this procedure for the other long L-bracket on the other side of the display. Use the included plastic spacers if any portion of the display back protrudes further than the VESA mounting points and prevents the brackets from being seated properly (see [figure 32](#) on page 22).

NOTE: The long L-brackets are designed to accommodate a variety of display heights. If the bracket is exposed over the top of the display, the top 8 inches (20.3 cm) of the SMK V SB 33 Plus long L-bracket can be broken off by bending the top breakaway portion back at the seam until it breaks off.

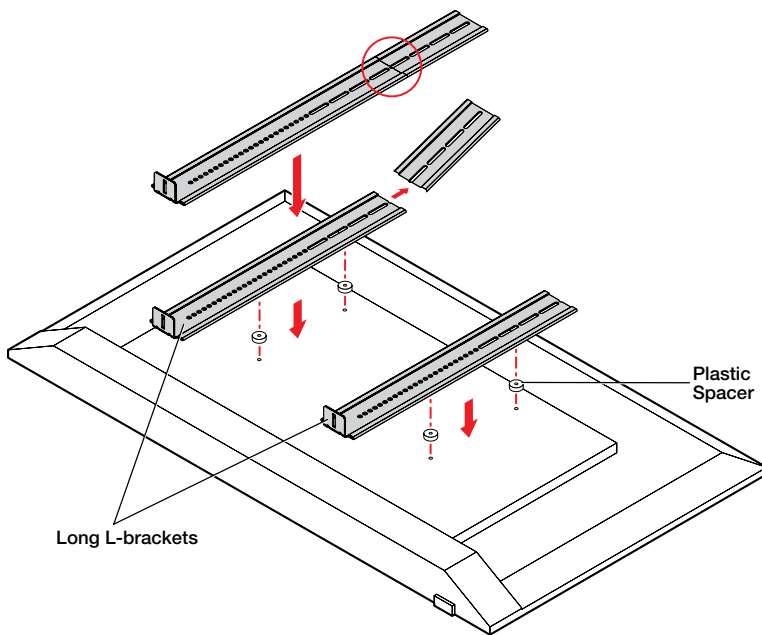


Figure 32. Positioning Long L-brackets on Display

4. Place the VESA display mount on top of the L-bracket, while aligning the bolt holes of the display mount with the bottom round hole and top slot hole of the L-bracket and the bolt hole of the display. Repeat this procedure for the other long L-bracket on the other side of the display.

NOTE: If the VESA display mount uses horizontal mounting brackets or a X-braced bracket, then insert the included 4 metal washers/spacers between the long L-bracket and VESA display mount.

5. Insert the bolts through the VESA display mounts, the long L-brackets, and the display. Be sure to align the bolt holes of the VESA display mounting holes and insert the bolts. Hand tighten all 4 bolts. Spacers are provided if needed (see figure 32).

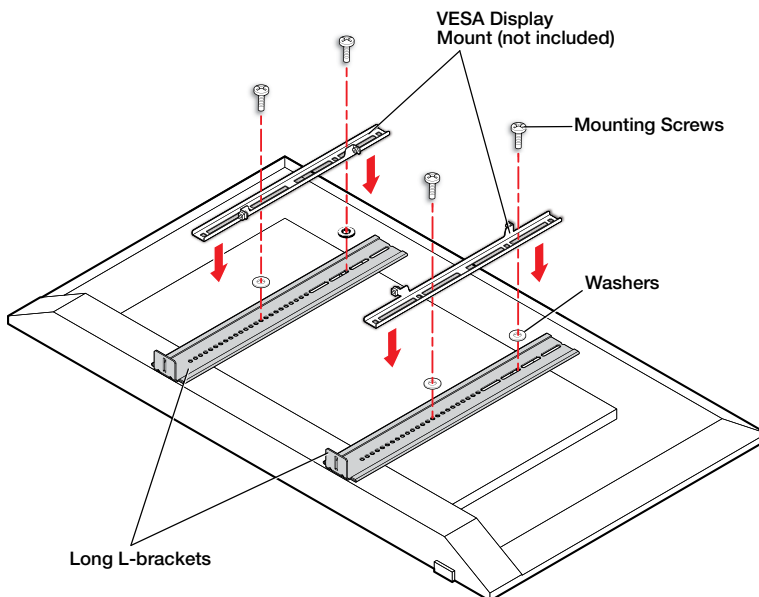


Figure 33. Installing VESA Display Mount to Long L-brackets

6. Position the short L-bracket under the long L-bracket so that the L-bends of each bracket are paired together. Afterwards, install 1 bolt with a wingnut and lock-washer so that the long and short L-brackets are held together. Tighten the wingnut.

7. Repeat this procedure for the other long L-bracket on the other side of the display.

NOTE: The short L-bracket may be reversed if the soundbar needs to be positioned further forward, relative to the display (see figure 34).

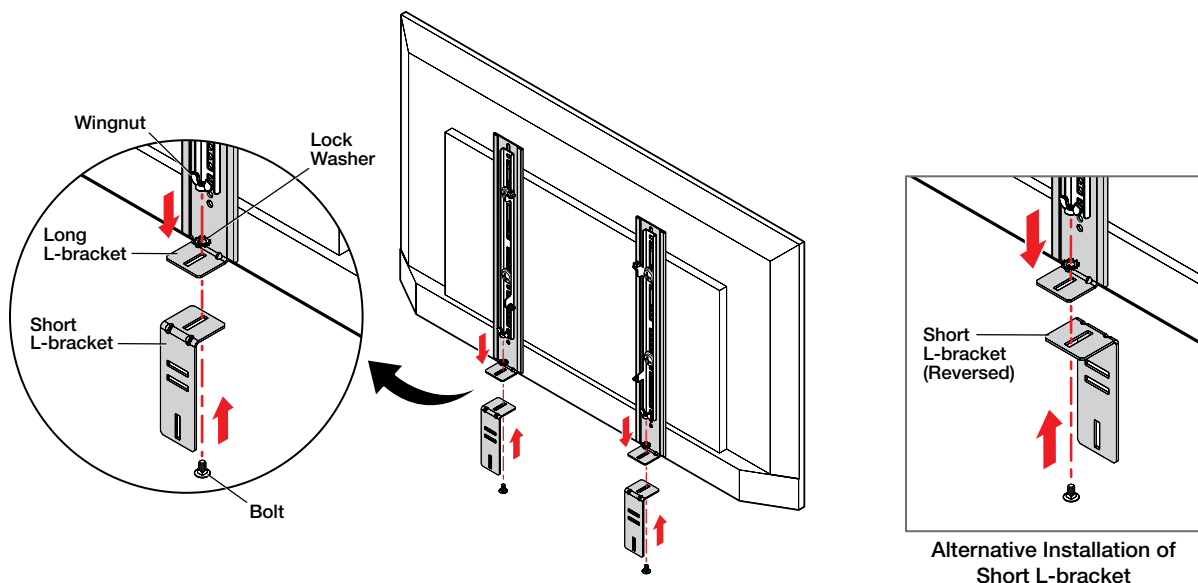


Figure 34. Installing Short L-brackets Long L-brackets

8. Install the SB 33 speaker wall plate to the short L-bracket using two bolts, two lock washers, and two wingnuts as shown in figure 35.
9. Repeat this procedure for the other short L-bracket on the other side.

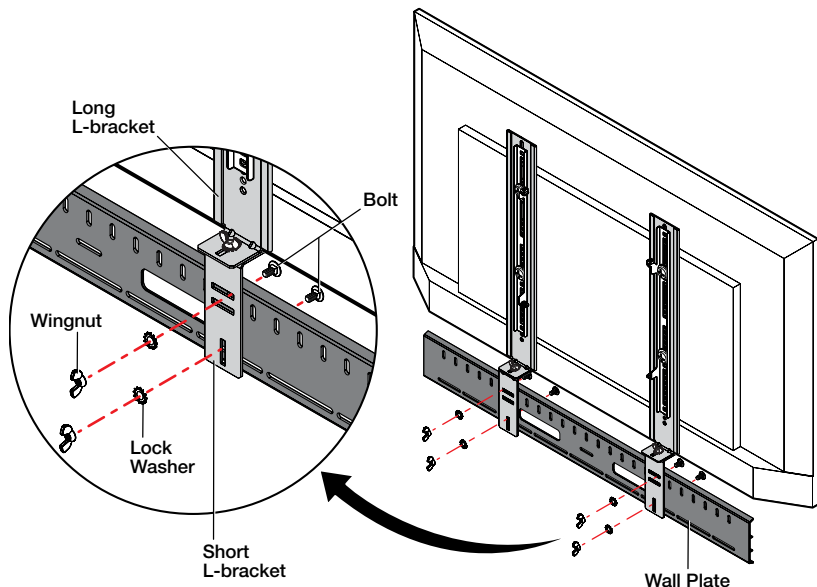


Figure 35. Installing the SB 33 Speaker Wall Plate

10. Tighten the bolts and permanently fasten the display onto the VESA wall mount previously attached.

11. To adjust the SB 33 speaker vertically:

- a. Loosen, but do not remove, the bolts that attach the long L-brackets to the display.

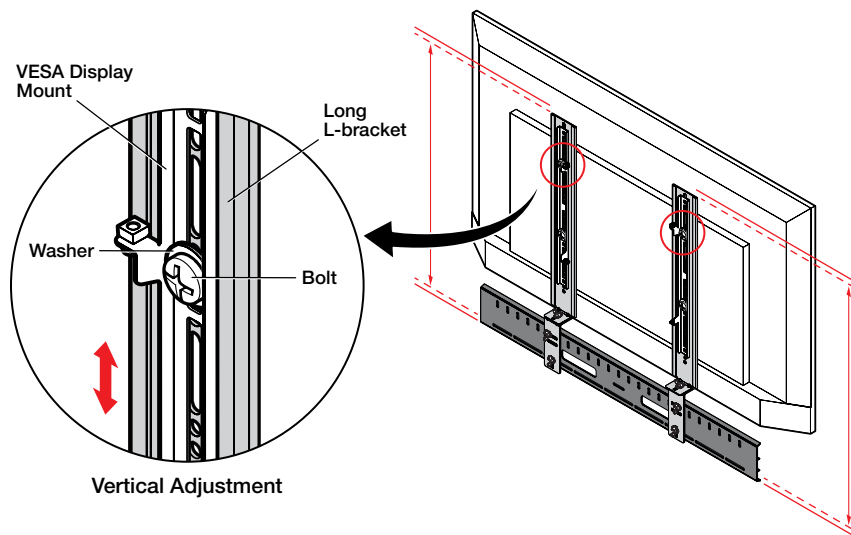


Figure 36. Loosening Long L-brackets Bolts

- b. Adjust the SB 33 to the desired distance from the display and then tighten the bolts.


CAUTION: If the display is already attached to the wall, the display could detach from the VESA mount if this adjustment is made. It is highly recommended that this adjustment be done prior to attaching the display to the wall.

ATTENTION: Si l'écran est déjà fixé au mur, il peut être détaché du support de montage VESA si ce réglage est effectué. Il est vivement recommandé d'effectuer ce réglage avant de fixer l'écran au mur.

NOTE: Assuming the display screen is level, allow for some space between the bottom of the display screen and the top of the speaker because the speaker assemblies and the center bracket attach to the wall plate by hooking the top mounting clasps of the speaker assemblies and center bracket over the top mounting rail of the wall plate.

To allow sufficient clearance between the top of the SB 33 A and the display screen above it, allow for at least a minimum clearance of 11/16 inch (17.5 mm) between the highest part of the top rail of the wall plate and the top of the speaker, as shown to the right. The display screen should not encroach into this area above the top rail.

The long L-brackets for the SMK V SB 33 Plus have holes for the lower VESA holes. As a result, it may be necessary to remove the lower bolts in order to adjust the vertical height. Depending on the short L-bracket orientation and depth adjustment, it is also possible to adjust the SB 33 speaker height by adjusting the wall bracket position on the short L-bracket.

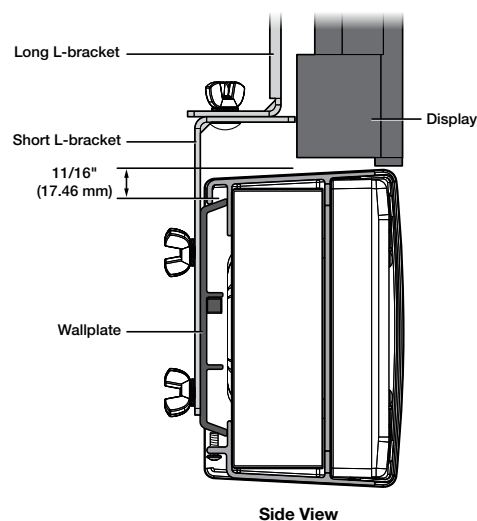

12. Install the SB 33 A speaker to the wall plate as shown in figure 37.

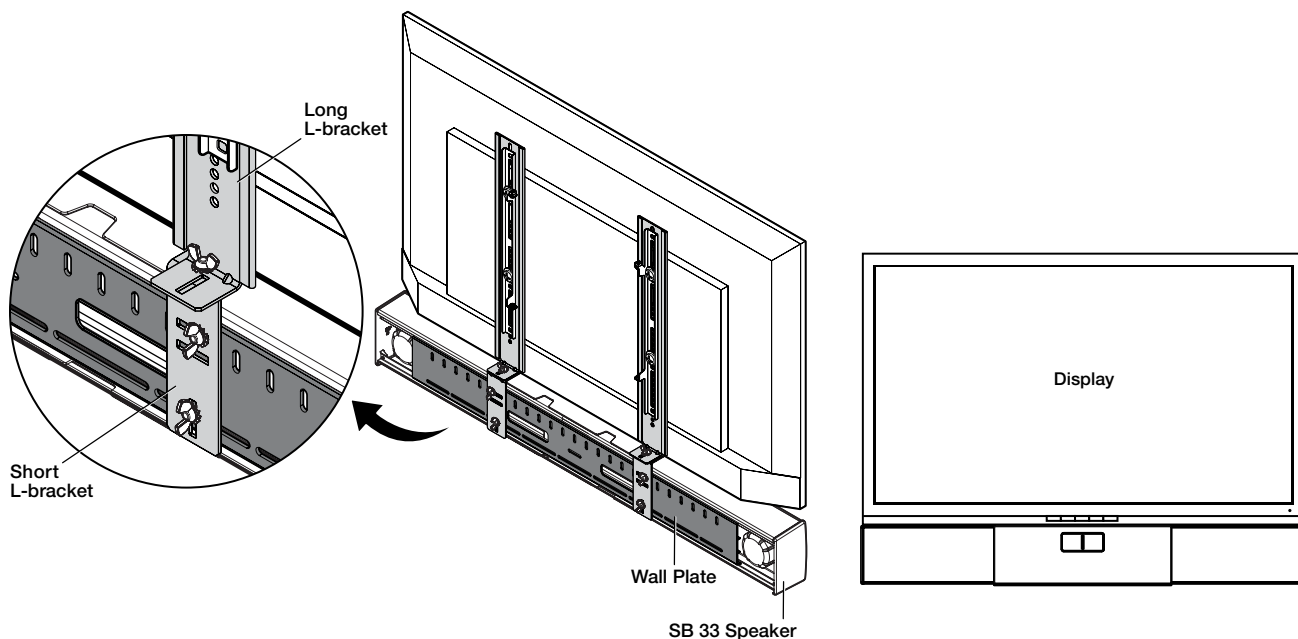


Figure 37. Installing the SB 33 A speaker wall plate

13. If the alignment between the display and the SB 33 speaker needs to be adjusted in order to align the front of the speaker assembly relative to front of the display do the following:
- Loosen, but do not remove, the two wingnuts attaching the long L-brackets to the short L-brackets.
 - Adjust the soundbar speaker to either the front or the rear of the display and then tighten the wingnuts.

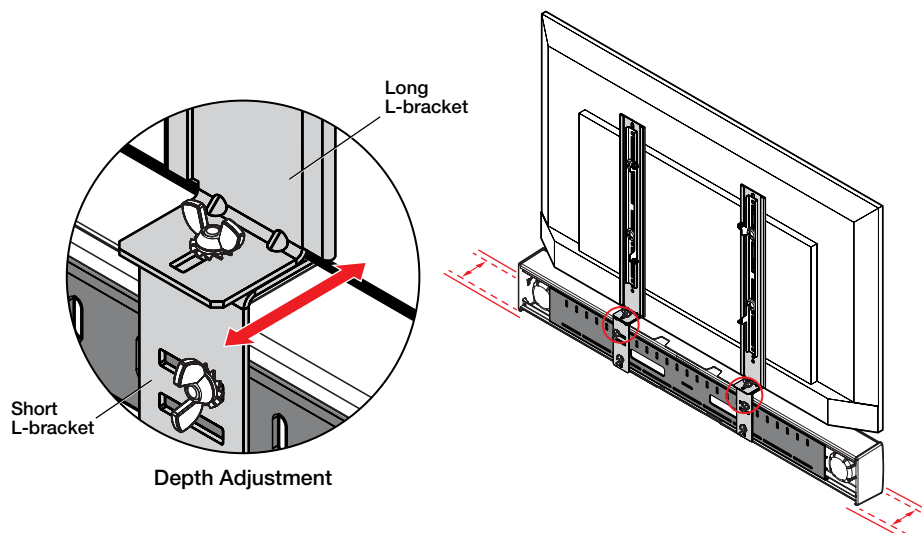


Figure 38. Adjusting Depth

SMK V SB 33 82-100 VESA Mounting Kit

The SMK V SB 33 82-100 VESA Mounting Kit is used to attach the SB 33 A Series of soundbar speakers (models SB 33 A 82-90 and SB 33 A 90-100) to the same VESA display mount supporting the display device. This type of installation enables the SB 33 speaker to be aligned with the display for a visually appealing installation. The SB 33 front speaker surface can be adjusted flush with the front of the display. It can be adjusted forward, backward, up, down, and side-to-side.

VESA display mounts come in a variety of different styles, so these instructions for installing the SMK V SB 33 82-100 VESA Mounting Kit are variable. Consult the installation guides for your specific VESA display mount and your display device before installing our kit. Follow the steps below to install the kit.

⚠ WARNING: Risk of personal injury or property damage. The final installation should be able to continuously support the speaker weight. The final installation should also be able to support short term overloading. Be sure to not exceed the load limit of the VESA mount, mounting surface, and SMK V SB 33 82-100. The maximum load limit of the SMK V SB 33 82-100 is 85 lb (38 kg). Since applications can vary considerably, it is assumed that the installer will exercise good judgment when selecting the mounting location, method, and hardware. Installation and service must be performed by authorized personnel only.

AVERTISSEMENT: Risque de dommages corporels ou matériels. L'installation finale doit pouvoir supporter en permanence le poids de l'enceinte. L'installation finale doit également pouvoir supporter une courte surcharge. Veillez à ne pas dépasser la charge maximale du support de montage VESA, de la surface de montage, et de l'unité SMK V SB 33 82-100. La charge maximale du SMK V SB 33 82-100 est de 38 kg. Étant donné la possibilité d'évolution considérable des applications, il est supposé que l'installateur fera preuve de discernement lors de la sélection de l'emplacement, du mode, et du matériel de montage. L'installation et la maintenance du système doivent être exclusivement effectuées par un technicien agréé.

ATTENTION:

- All structural steps and electrical installation must be performed by qualified personnel in accordance with local and national building codes and electrical codes.
- Toute étape structurelle et installation électrique doit être effectuée par un personnel qualifié, conformément aux codes de sécurité de bâtiments et de produits électriques en vigueur à l'échelle régionale et nationale.

The SMK V SB 33 82-100 VESA Mounting Kit is composed of

- 2 Long L-brackets
 - 2 Short L-brackets
 - Reinforcing plate (see [figure 4](#) on page 6)
 - 4 Plastic spacers
 - 10 Bolts
 - 10 Lock washers
 - 10 Washers
 - 10 Wingnuts
1. Install the wall mount portion of the VESA display mount onto the desired wall location (see the VESA display mount installation guide).

2. Position one long L-bracket of the SB 33 kit on the back of the display while aligning the bolt holes on the display with a slot on the L-bracket. Repeat this procedure for the other long L-bracket on the other side of the display (see figure 39).

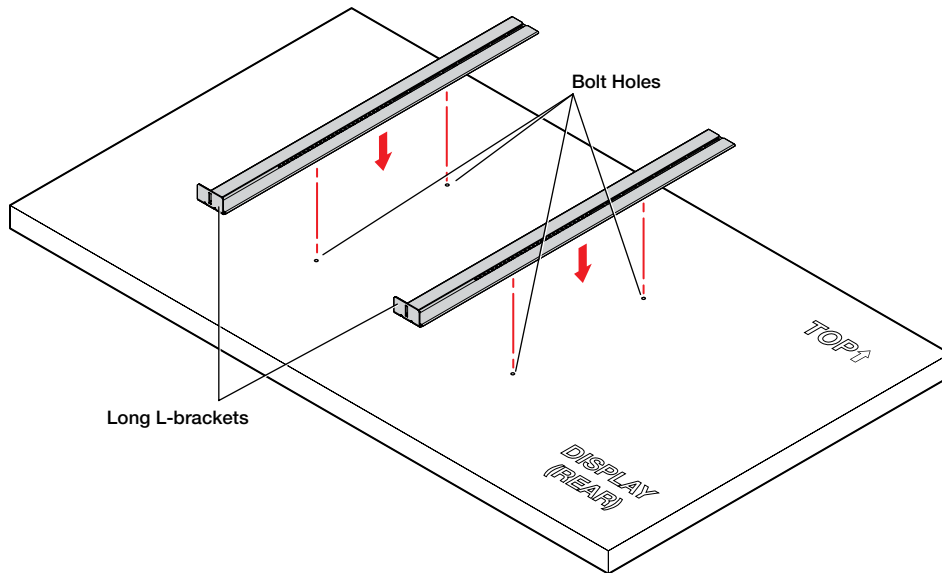


Figure 39. Installing Long L-brackets

3. Place the VESA display mount on top of the L-bracket while aligning the bolt holes of the display mount with the slot of the L-bracket and the bolt holes of the display. Repeat this procedure for the other long L-bracket on the other side of the display.

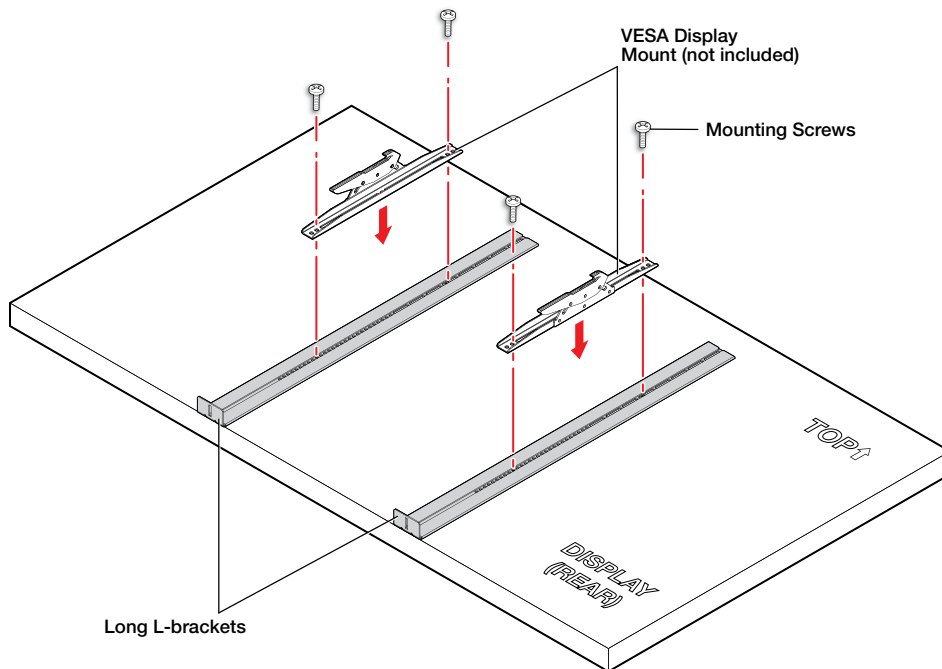


Figure 40. Installing VESA Display Mount

4. Insert bolts through the VESA display mounts, the long L-brackets, and the display, making sure to align the bolt holes of the VESA display mounts with the bolt holes of the display (see figure 40). Tighten all four bolts. Spacers are provided if needed.

5. Position the short L-bracket under the long L-bracket that was installed in [step 4](#) on page 27 so that the L bends of each bracket are paired together (see figure 41, **1**). Then install one bolt with a wingnut and lockwasher (included in the kit) so that the long L-bracket and short L-bracket are held together. Tighten the wingnut. Repeat this procedure for the other long L-bracket on the other side of the display.

NOTE: The short L-bracket may be reversed if the SB 33 speaker needs to be positioned further forward relative to the display above it (**2**).

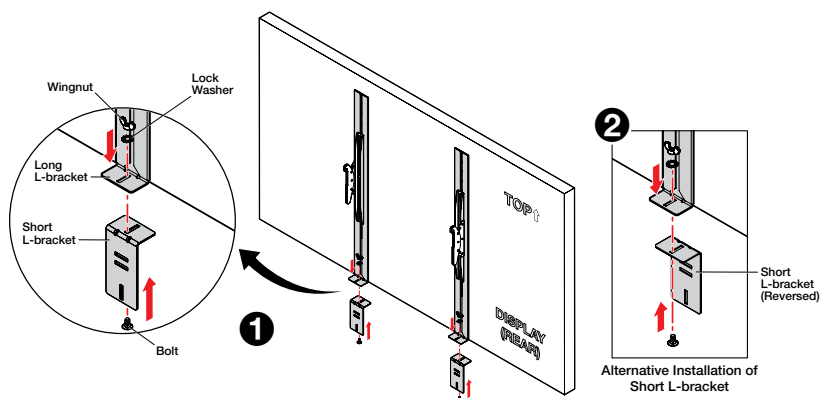


Figure 41. Installing Short L-brackets on the Long L-brackets

6. For extra rigidity, attach the metal reinforcing plate connection bracket to the back of the wall plate.

Right Piece of Wall Plate

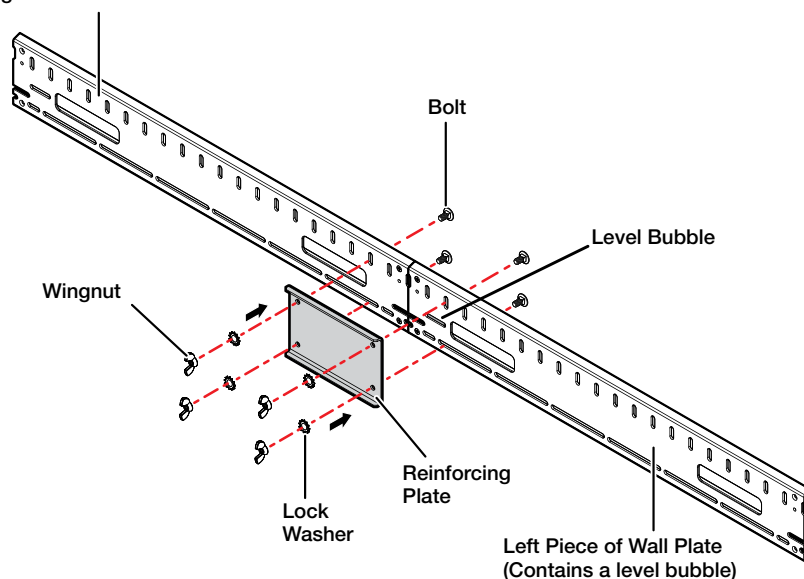


Figure 42. Attaching the Reinforcing Plate

7. Install the SB 33 speaker wall plate to the short L-bracket using two bolts, two lock washers, and two wingnuts (see figure 43). Repeat this procedure for the other short L-bracket on the other side.

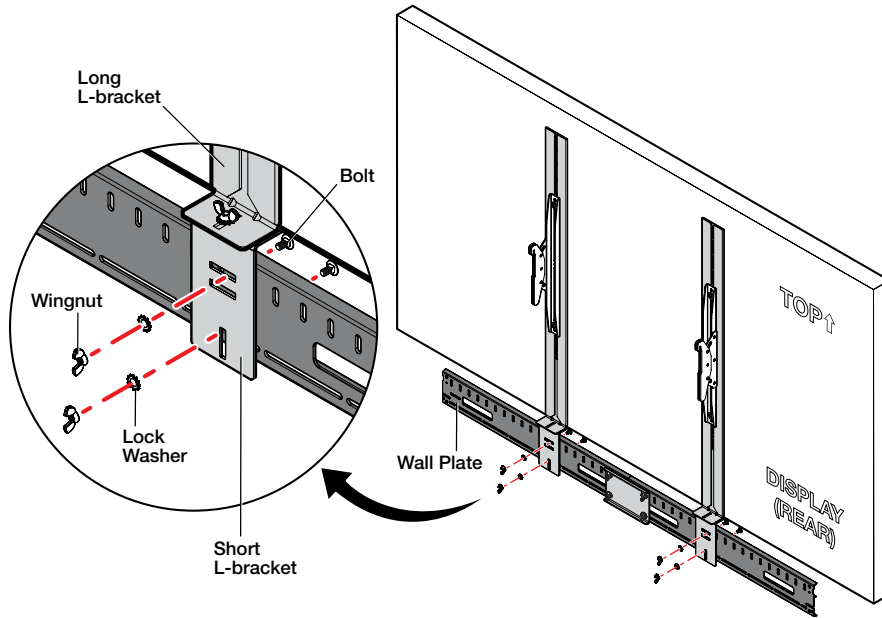


Figure 43. Installing the SB 33 Speaker Wall Plate

8. Fasten the display onto the VESA wall mount that was attached in [step 4](#) on page 27.
9. Adjust the SB 33 vertically as needed:
 - a. Loosen, but do not remove, the bolts that attach the long L-brackets to the display.


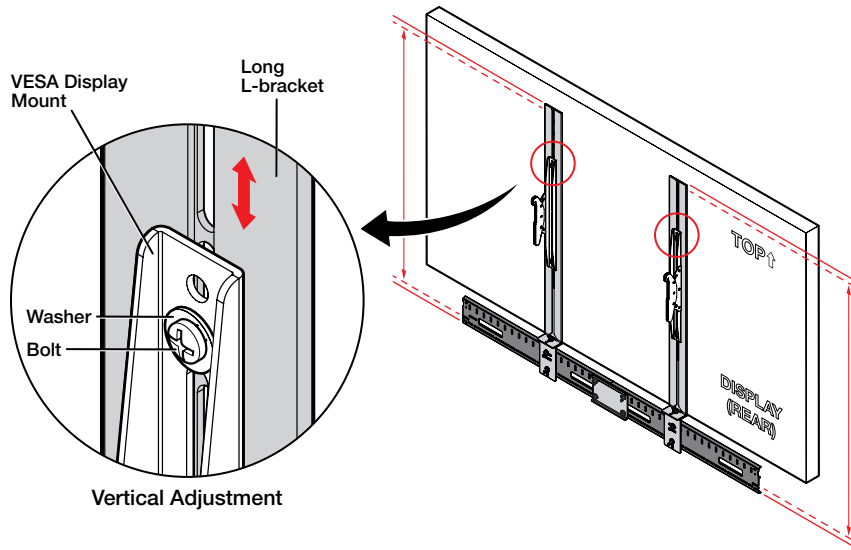


Figure 44. Adjusting the SB 33 Speaker Wall Plate

- b. Adjust the SB 33 to the desired distance from the display, then tighten the bolts.

NOTE: Assuming the display screen is level, allow for some space between the bottom of the display screen and the top of the speaker because the speaker assemblies and the center bracket attach to the wall plate by hooking the top mounting clasps of the speaker assemblies and center bracket over the top mounting rail of the wall plate.

To allow sufficient clearance between the top of the SB 33 A and the display screen above it, allow for at least a minimum clearance of 0.69 inches (17.5 mm) between the highest part of the top rail of the wall plate and the top of the speaker, as shown to the right. The display screen should not encroach into this area above the top rail.

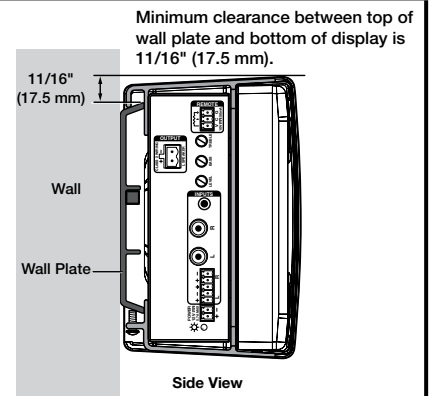

10. Install the SB 33 A speaker to the wall plate. If the alignment between the display and the SB 33 speaker needs to be adjusted, see [Aligning the SB 33 Speaker to the Display](#) on page 31.

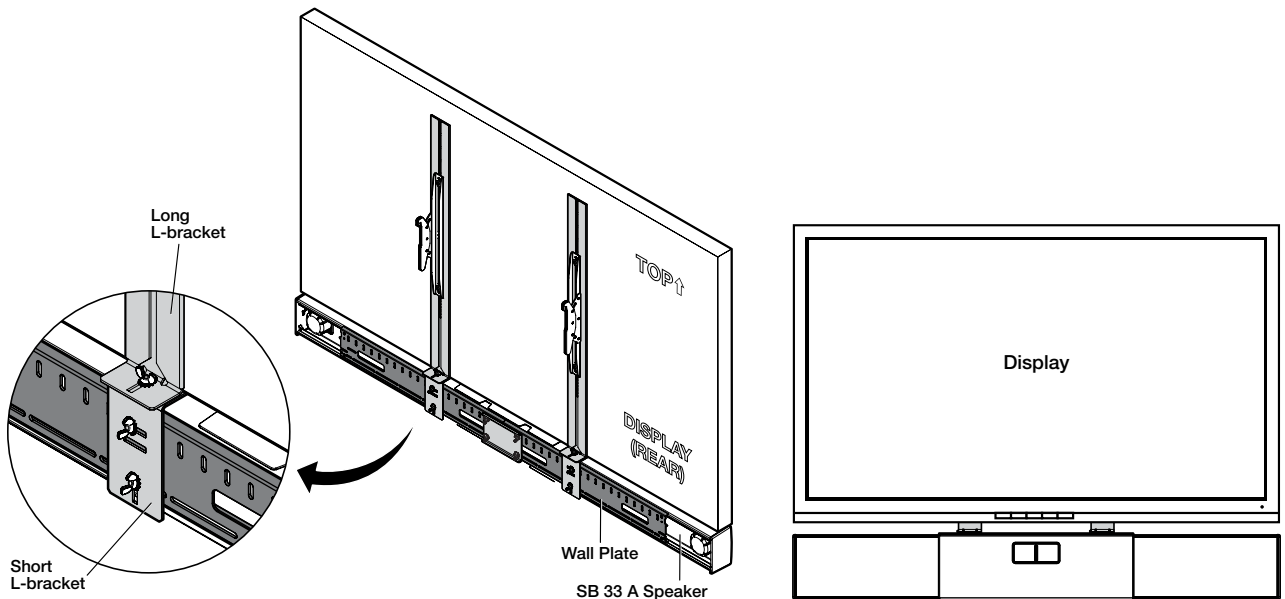


Figure 45. Installing the SB 33 Speaker Wall Plate

Aligning the SB 33 Speaker to the Display

The SMK V SB 33 82-100 VESA Mounting Kit can be adjusted to align the SB 33 speaker assembly relative to the front of the display, from front to rear (depth).

To align the speaker to the display:

1. Loosen, but do not remove, the two wingnuts that attach the long L-brackets to the short L-brackets.

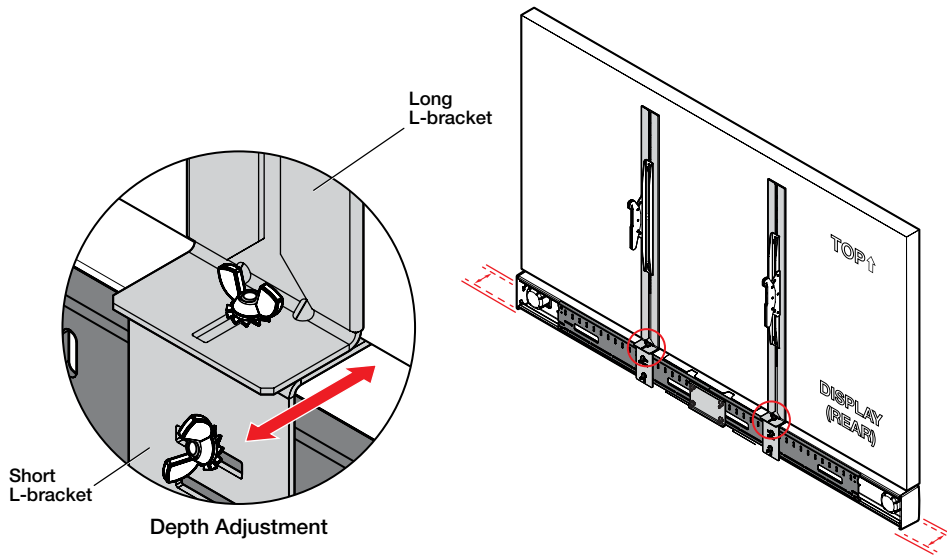


Figure 46. Adjusting Depth

2. Adjust the SB 33 either to the front or to the rear of the display and then tighten the wingnuts.

Operation

Topics covered in this section of the guide include the following:

- [SB 33 A Internal Amplifier Front Panel](#)
- [Internal Adjustments](#)

SB 33 A Internal Amplifier Front Panel

The internal amplifier is positioned inside right speaker module.

Right Speaker/Amplifier
(Side View)

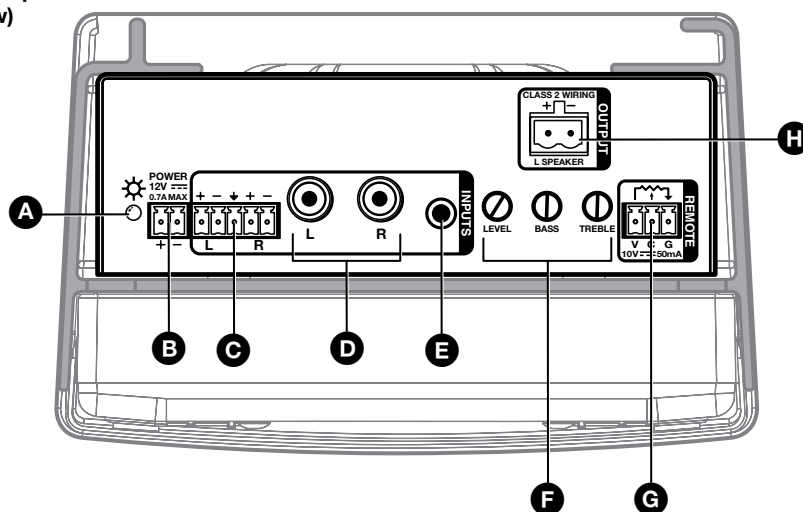


Figure 47. The Front Panel of the SB 33 A Amplifier

- | | |
|---|---|
| A Power LED | E 3.5 mm unbalanced stereo input jack (see page 33) |
| B Amplifier power supply connector (see page 33) | F Level, Bass, and Treble potentiometers (see page 34) |
| C Captive screw balanced or unbalanced audio input connector (see page 33) | G Remote volume control connector (see page 34) |
| D RCA unbalanced stereo input connectors (see page 33) | H Left Speaker output receptacle (see page 34) |

- A Power LED** — The LED lights green when the amplifier is receiving power and active. It lights amber when the unit is powered down (after 25 minutes of inactivity).

- B Amplifier power supply connector** (see [figure 47](#) on page 32) — Connect one end of the DC power cord to one of the two pole, 3.5 mm captive screw outlets on the power supply. Connect the other end into the power receptacle on the rear panel of the amplifier, as shown in figure 48. The power cord connectors are correctly wired when shipped.

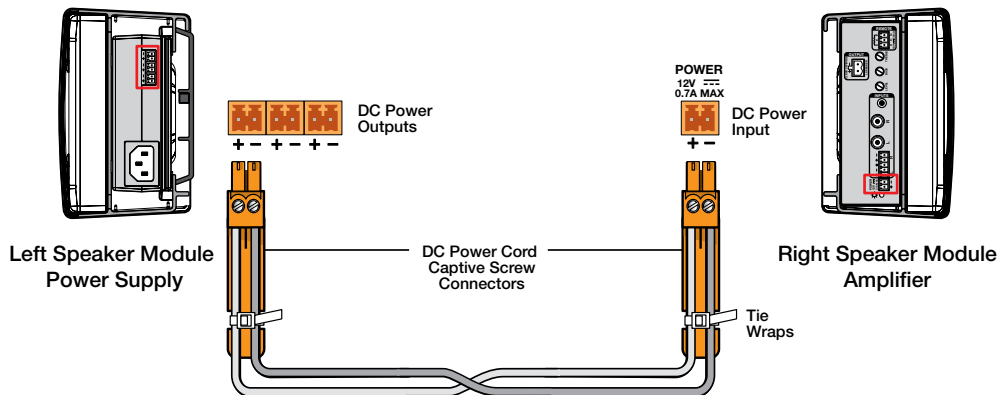


Figure 48. Power Supply to Amplifier Cable Connection

- C Captive screw balanced or unbalanced audio input connector** — This 5-pole 3.5 mm captive screw receptacle accepts line level, balanced or unbalanced, mono or stereo audio signals. See the [ATTENTION](#) on page 10 for important information about connecting wires to captive screw connectors.

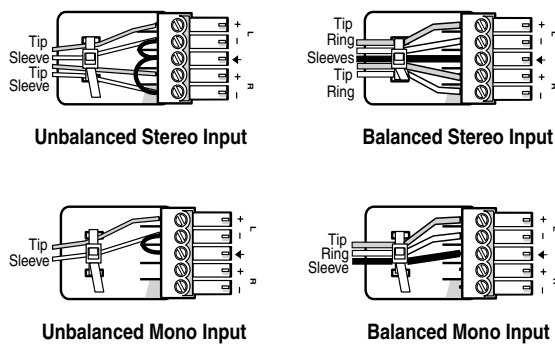


Figure 49. Captive Screw Balanced and Unbalanced, Mono and Stereo Audio Inputs

- D RCA unbalanced stereo input connectors** — These receptacles accept unbalanced, line level audio signals. The input can be stereo, using two RCA connectors, or mono, using a single RCA connector plugged into the left receptacle.

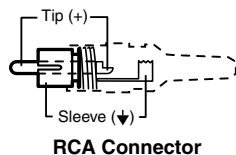


Figure 50. RCA Connector

If unused, the receptacles automatically terminate to lower the noise floor.

- E 3.5 mm unbalanced stereo input jack** — This input also accepts unbalanced, line level audio signals through a 3.5 mm tip-ring-sleeve (TRS) stereo connector. If unused, the receptacle automatically terminates to lower the noise floor.

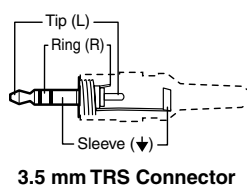


Figure 51. TRS Audio Connector

- F Level, Bass, and Treble potentiometers** (see [figure 47](#) on page 32) — Three front panel potentiometers are used to optimize input level, bass, and treble settings.
- G Remote volume control connector** — This 3-pin, captive screw port allows an audio controller to control volume and mute levels remotely (see “Wiring for Remote Control” below).

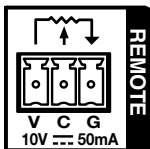


Figure 52. Remote Volume Control

- H Left Speaker output receptacle** (to the left speaker) — This 2-pole, 5 mm screw lock captive screw receptacle is used to connect the amplifier to the left speaker.

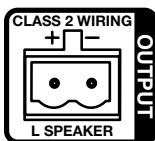


Figure 53. Left Speaker Output Receptacle

The amplifier produces up to 15 watts per channel.

ATTENTION:

- Use ‘Class 2 Wiring’ to connect speakers to the amplifier output.
- Utilisez un câblage de classe 2 pour connecter les enceintes à la sortie de l’amplificateur.

Wiring for Remote Control

Options for remote control include the Extron VC 50, VCM 110 AAP, VCM 200 series, and MLA VC10 Plus. Third party 10k potentiometer volume controllers can also be connected to this port. Figure 54 and the descriptions below show the wiring for the VCM 100 MAAP. Wiring other remote control connectors is similar.

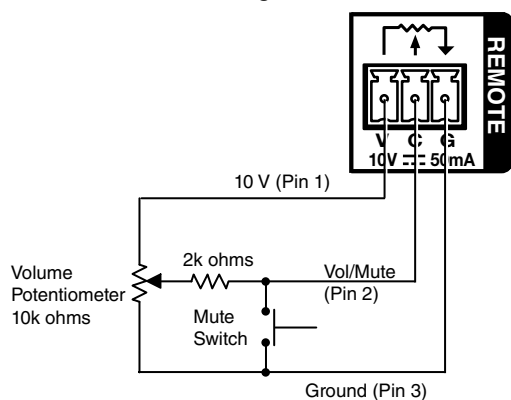


Figure 54. Remote Control Connector

- Pin 1 is for 10 VDC reference voltage output.
- Pin 2 (C) has two functions:
 - Volume control: it can be used as a variable voltage input between 0 and 10 VDC, with 0 V giving full attenuation and 10 V giving maximum volume.
 - Mute: it can be used for remote control muting. Sound is muted while this pin is shorted to ground.
- Pin 3 is for the ground connection.

NOTE: All nominal levels are at $\pm 10\%$.

Audio Output

This 2-pole, 5 mm screw lock captive screw receptacle is used to connect the amplifier to the left speaker. The amplifier produces up to 15 watts per channel.

ATTENTION:

- Use 'Class 2 Wiring' to connect speakers to the amplifier output.
- Utilisez un câblage de classe 2 pour connecter les enceintes à la sortie de l'amplificateur.

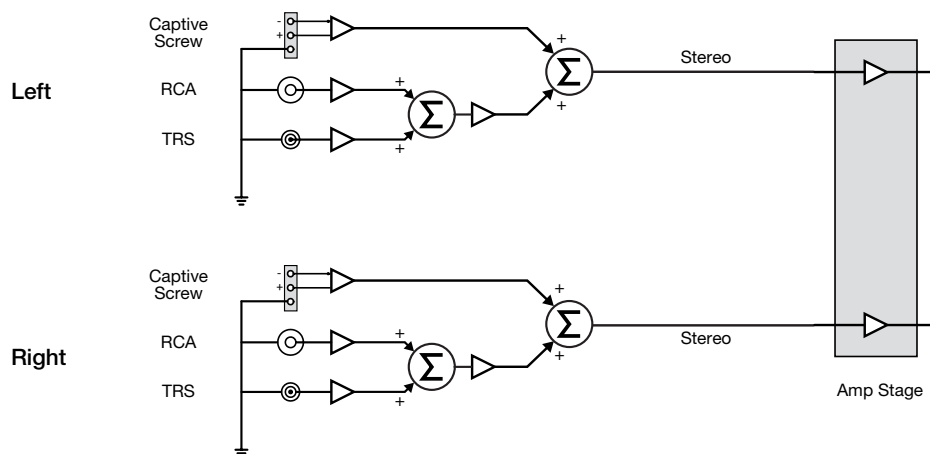


Figure 55. Amplifier Output Channels

Signal flow is as follows:

1. The SB 33 A sums and weights the left unbalanced signals from the TRS and RCA receptacles. This summed, unbalanced signal is then summed with the left balanced signal from the captive screw receptacle.
2. The right channel is handled in the same way.
3. The left and right stereo channels are sent to the left and right output amplifiers respectively

The captive screw, RCA, and TRS inputs are buffered.

Internal Adjustments

This section describes how to set the level, bass, and treble potentiometers on the SB 33 A (located on the panel inside the right speaker module).



Figure 56. Level, Bass, and Treble Knobs (located inside right speaker module)

Setting Input Level

Adjust the amplifier input level as follows:

1. Unplug the Remote plug from the unit.
2. Set the volume of the audio source to its minimum level.
3. Turn the Level potentiometer fully counterclockwise to its minimum setting.
4. Set the volume of the audio source to its maximum level. No sound should come out.
5. Slowly increase the amplifier level by rotating the Level potentiometer clockwise until sound distortion starts. Lower the level slightly until the distortion disappears. At this setting, whatever the volume setting of the audio source, no clipping should occur.

Setting Bass and Treble

Adjust the amplifier bass and treble as follows:

1. Use the Bass potentiometer to increase or decrease the bass shelving ± 10 dB at 80 Hz and below.
2. Use the Treble potentiometer to increase or decrease the treble shelving ± 10 dB at 10 kHz and above.

NOTE: Turning the Bass or Treble potentiometers counterclockwise decreases the output at the specified frequencies. Turning the potentiometers clockwise increases the output. When the potentiometer is in the center, flat response is achieved.

Reference Information

Topics covered in this section of the guide include the following:

- [Defeating the Auto Power-down Timer](#)
- [Troubleshooting](#)

Defeating the Auto Power-down Timer

The auto power-down timer determines whether or not the amplifier enters standby mode. The amplifier powers down if the input signal remains below the input signal detection threshold for about 25 minutes.

The timer resets whenever the input signal exceeds the input signal detection threshold. Resetting the timer starts a new 25 minute countdown until the amplifier powers down. Resetting the timer also causes an amplifier that is already powered down to “wake up.”

There may be times when it is desirable to bypass the auto power-down timer. However, this should be done as a last resort. Examples of when defeating the auto power-down circuit might be required include:

- If the amplifier is used in a paging system. When the amplifier has already powered down, the first syllable might be cut off as the amplifier wakes up from standby mode.
- If the input signal is so quiet that the level remains below the input signal detection threshold for 25 minutes, the timer would cut the audio in the middle of playback by placing the amplifier into standby mode.

ATTENTION:

- The following procedure cannot be reversed and should be carried out as a last resort. Be certain that you need to defeat the auto power-down timer before continuing.
- La procédure qui suit est irréversible et doit être effectuée en dernier recours. Veuillez désactiver le temporisateur de mise hors tension automatique avant de continuer.

To defeat the auto power-down timer, follow these instructions:

1. Gain access to the front panel of the amplifier by removing the center section grille and then the center section cover (see [figure 30](#) on page 19).
2. Disconnect the power cable from the amplifier.
3. Disconnect all audio cables that attach to the amplifier.
4. Disconnect any connections to the remote input connector.

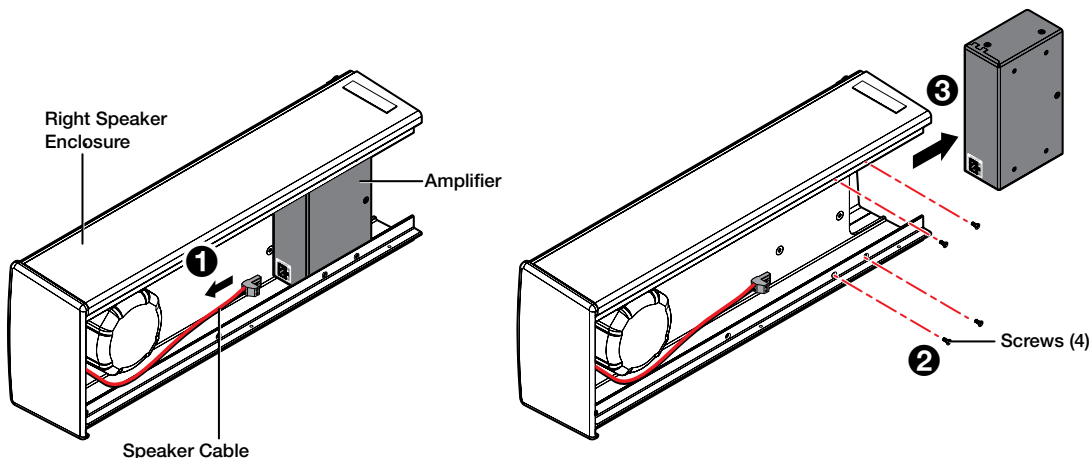


Figure 57. Disconnecting the Right Speaker Wire from the Amplifier

5. Loosen the two bottom screws that attach the right speaker enclosure to the wall plate and remove it.
6. Disconnect the speaker wire from the amplifier side (figure 57, ①) that goes to the right speaker.
7. Remove the four screws that attach the amplifier to the right speaker enclosure (②).
8. Remove the amplifier from the right speaker enclosure (③).
9. Remove the five screws that secure the top cover of the amplifier (there are two screws on each side panel and one on the top).

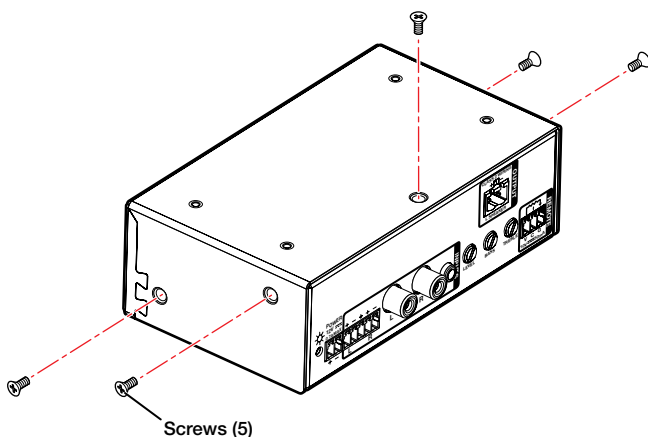


Figure 58. Removing the Top Cover of the Amplifier

ATTENTION:

- Exercise caution when removing the screws to avoid stripping the screw heads.
- Soyez prudent en retirant les vis afin d'éviter d'abîmer les têtes de vis.

10. Slide the cover forward a little, then lift the cover straight up and place it out of the way. The circuit boards are now exposed at the back.

ATTENTION:

- Do not touch the electronic components or the connectors on the backplane or on the circuit boards without being electrically grounded.
- Ne pas toucher les composants électroniques ou les connecteurs sur la carte mère ou sur les circuits imprimés sans être électriquement relié à la terre.

11. Identify resistor R42 at the back of the bottom circuit board.

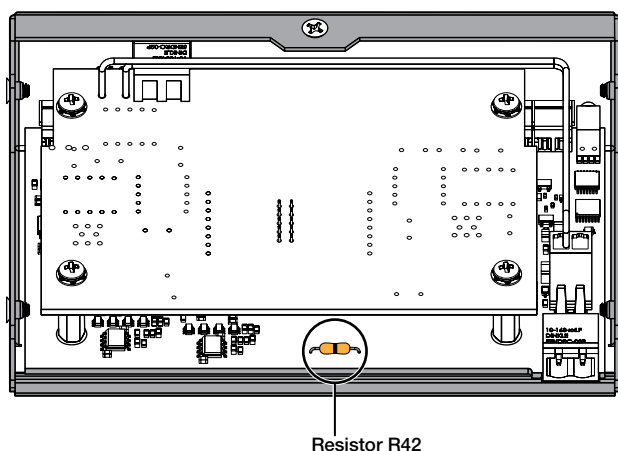


Figure 59. Removing the R42 Resistor

12. Remove the resistor using a pair of diagonal cutters to clip the wires attaching it to the circuit board.
13. Re-attach the top cover with the five screws that were removed in [step 9](#) on page 38
14. Re-attach the amplifier to the right speaker enclosure using the four screws that were removed in [step 7](#) on page 38.
15. Re-attach the speaker cable from the right speaker.
16. Re-attach the right speaker enclosure to the wall plate and tighten the two bottom screws that were loosened in [step 5](#) on page 38.
17. Re-attach all power, VCM, and audio cables that were removed from the amplifier.
18. Re-attach the center section cover and center section grille that were removed in [step 1](#) on page 38.

Troubleshooting

When an error condition occurs, the front panel LED lights green or amber to provide diagnostic information.

Amplifier Fails to Exit Standby Mode Promptly

Power LED Color	Problem Description	Problem Solution
Amber	No output signal.	No input detected: verify that there is an input signal. If a signal is present, raise the level of the source signal.
Green	No output signal.	The amplifier may be in mute mode. Check the Remote port.
Green or Amber	Slow to exit standby mode when a signal is present.	The input signal may be too weak. Raise the level of the source signal.

Amplifier Enters Standby Mode Too Early

Power LED Color	Problem Description	Problem Solution
Green or Amber	Enters standby mode early.	The input signal may be too weak. Raise the level of the source signal.

Extron Warranty

Extron warrants this product against defects in materials and workmanship for a period of three years from the date of purchase. In the event of malfunction during the warranty period attributable directly to faulty workmanship and/or materials, Extron will, at its option, repair or replace said products or components, to whatever extent it shall deem necessary to restore said product to proper operating condition, provided that it is returned within the warranty period, with proof of purchase and description of malfunction to:

**USA, Canada, South America,
and Central America:**

Extron
1230 South Lewis Street
Anaheim, CA 92805
U.S.A.

Asia:

Extron Asia Pte Ltd
135 Joo Seng Road, #04-01
PM Industrial Bldg.
Singapore 368363
Singapore

Japan:

Extron Japan
Kyodo Building, 16
Ichibancho
Chiyoda-ku, Tokyo 102-0082
Japan

Europe:

Extron Europe
Hanzeboulevard 10
3825 PH Amersfoort
The Netherlands

China:

Extron China
686 Ronghua Road
Songjiang District
Shanghai 201611
China

Africa and Middle East:

Extron Middle East
Dubai Airport Free Zone
F13, PO Box 293666
United Arab Emirates, Dubai

This Limited Warranty does not apply if the fault has been caused by misuse, improper handling care, electrical or mechanical abuse, abnormal operating conditions, or if modifications were made to the product that were not authorized by Extron.

NOTE: If a product is defective, please call Extron and ask for an Application Engineer to receive an RA (Return Authorization) number. This will begin the repair process.

USA: 714.491.1500 or 800.633.9876

Asia: 65.6383.4400

Europe: 31.33.453.4040 or 800.3987.6673

Japan: 81.3.3511.7655

Africa and Middle East: 971.4.299.1800

Units must be returned insured, with shipping charges prepaid. If not insured, you assume the risk of loss or damage during shipment. Returned units must include the serial number and a description of the problem, as well as the name of the person to contact in case there are any questions.

Extron Electronics makes no further warranties either expressed or implied with respect to the product and its quality, performance, merchantability, or fitness for any particular use. In no event will Extron Electronics be liable for direct, indirect, or consequential damages resulting from any defect in this product even if Extron Electronics has been advised of such damage.

Please note that laws vary from state to state and country to country, and that some provisions of this warranty may not apply to you.